


SNAPPER®

REAR-ENGINE RIDING MOWERS SERIES 6

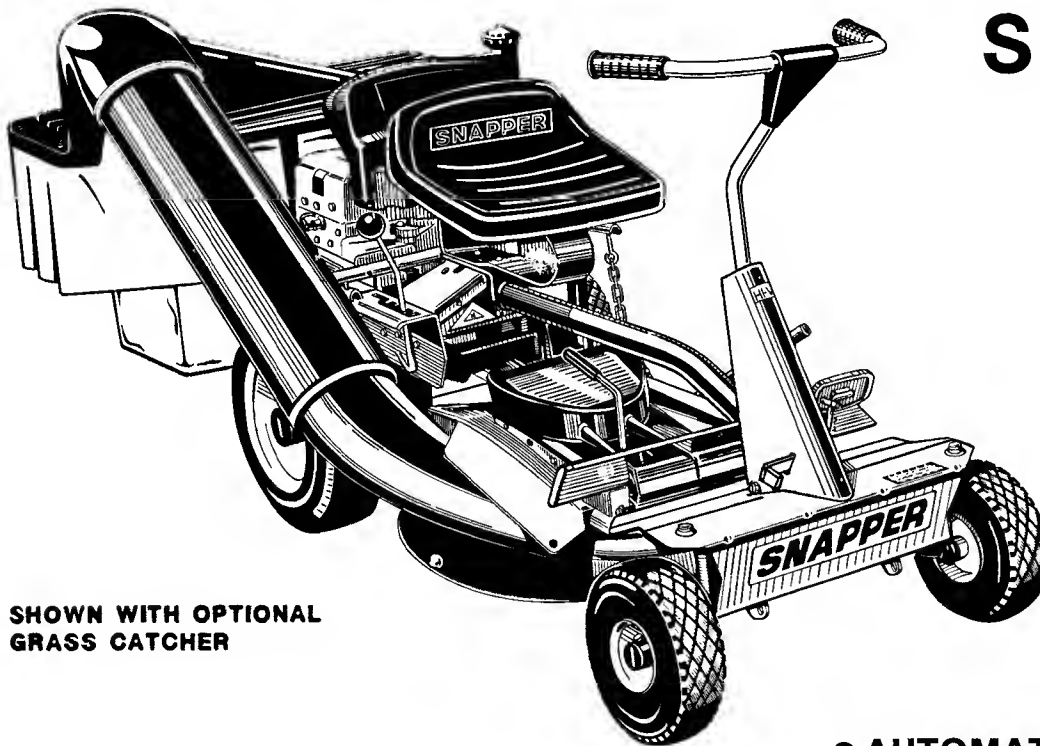

**SHOWN WITH OPTIONAL
GRASS CATCHER**

- **AUTOMATIC BLADE STOP**
- **SMOOTH START CLUTCH**

STANDARD MODELS*

NOTE: The Series number is the last numeral in the model number.


***For EXTRA TOUGH SERIES 6 MODELS See Manual #06092**

SNAPPER POWER EQUIPMENT
McDonough, GA • 30253


(Rev. 3, 7/96)

MANUAL #06082

INDEX (TOP VIEW)

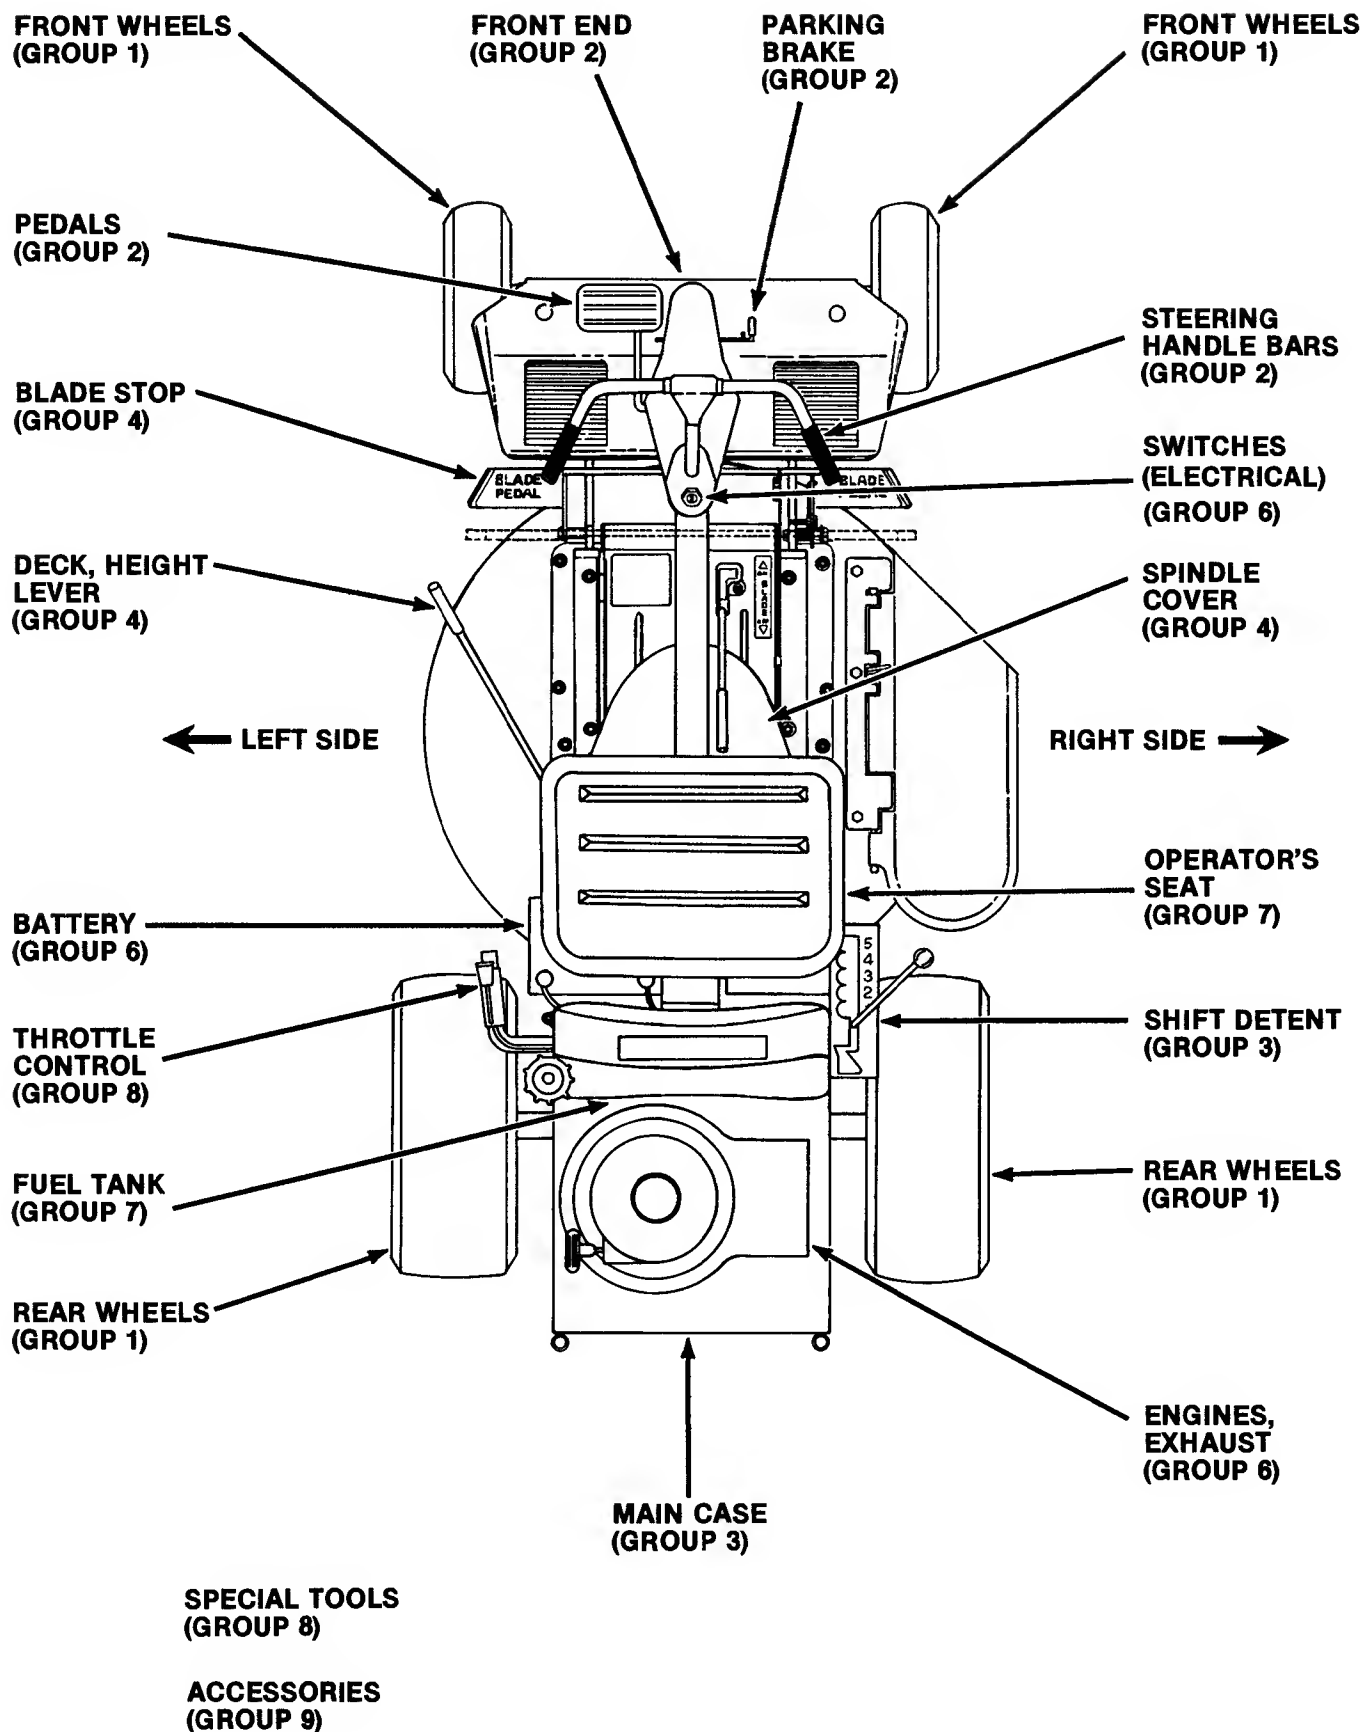


INDEX (BOTTOM VIEW)

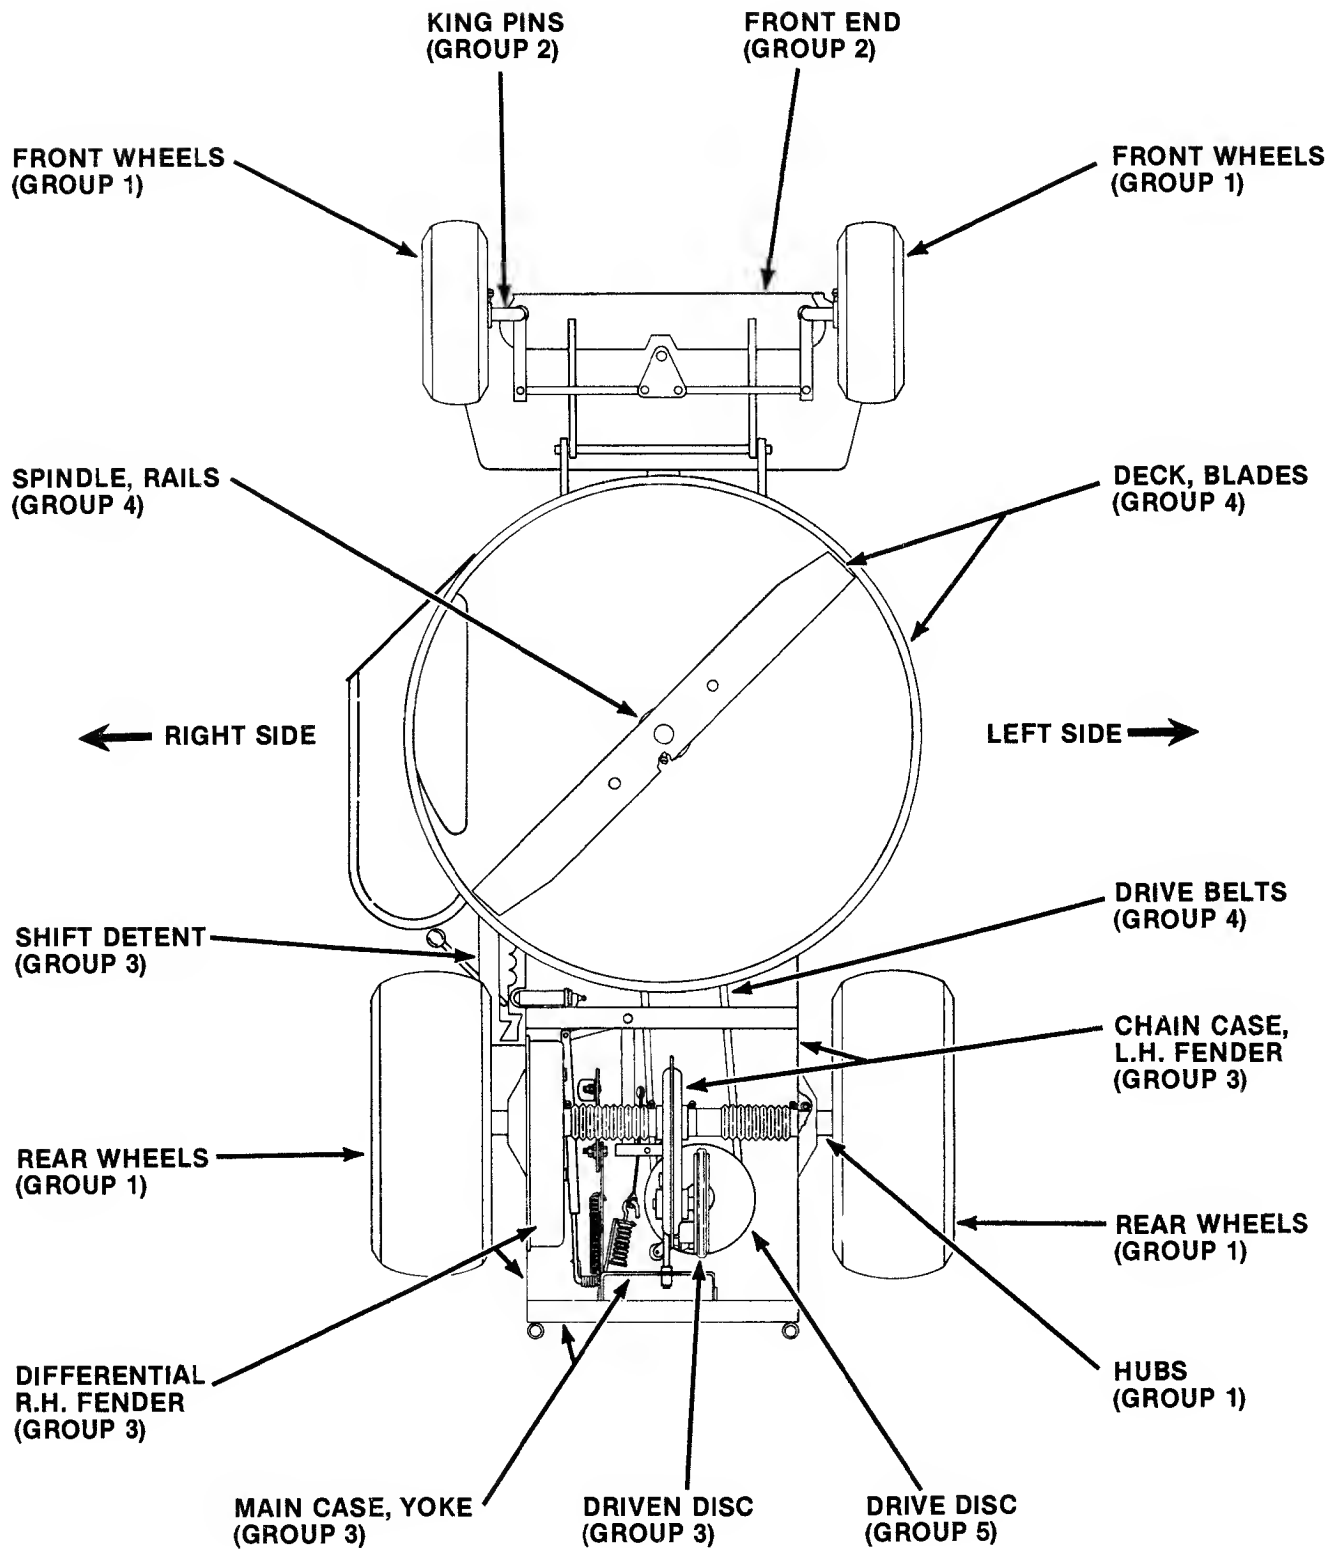

WHEELS - FRONT

① ASSEMBLY

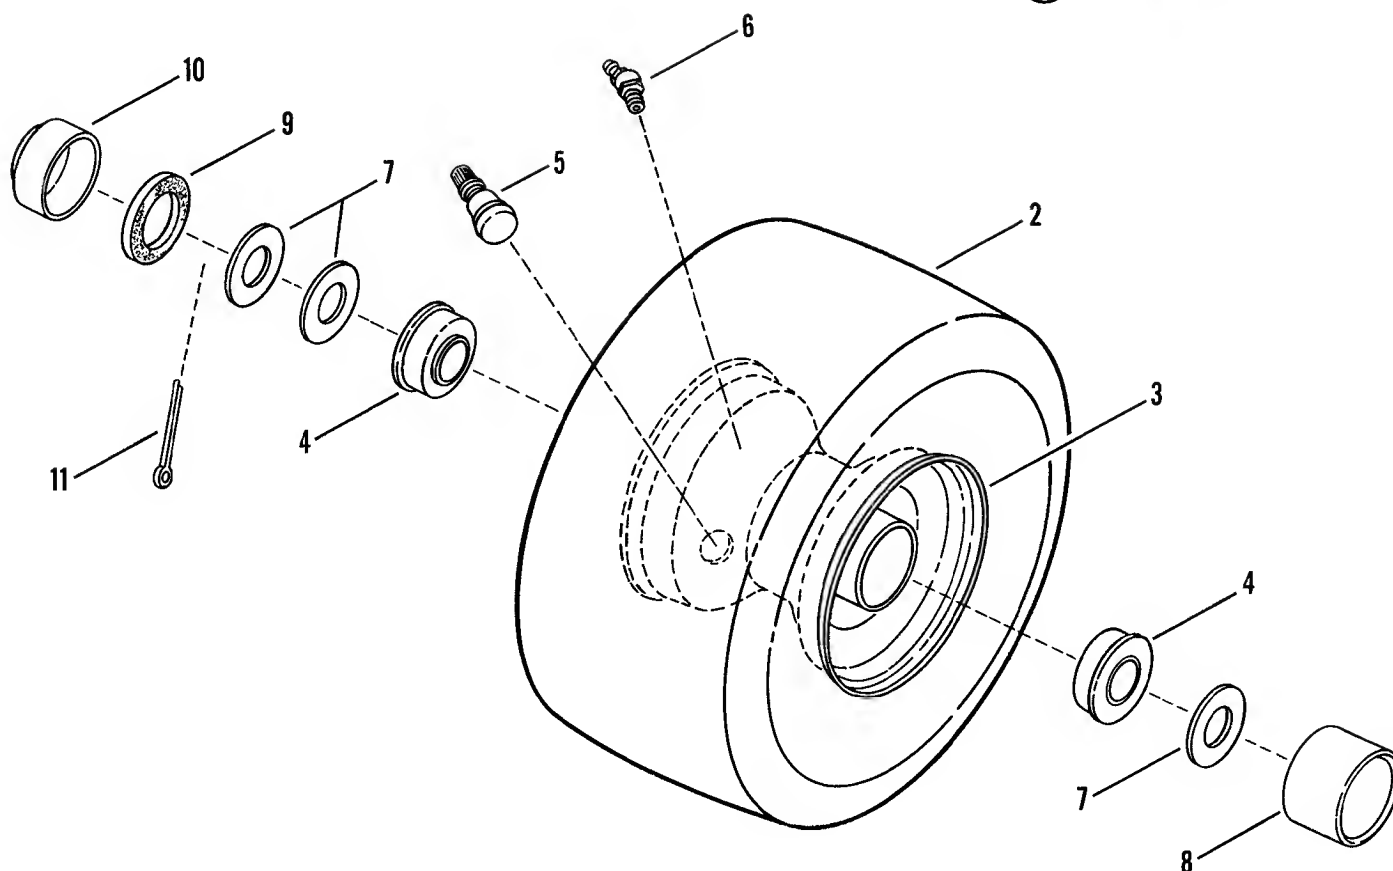


ITEM	PART NO.	DESCRIPTION
1	5-7240	ASSEMBLY, Front Tire & Rim, Complete, (Semi-Pneumatic)
-	5-0618	ASSEMBLY, Front Tire & Rim, (Includes items 2,3,4,5,6)
2	1-0820	TIRE, Pneumatic, 4.10/3.50x4
3	1-0819	RIM, (For 4.10/3.50x4 Tire)
4	1-1807	BEARING, Ball
5	1-2234	VALVE, Air (Snap-in)
6	1-4247	FITTING, Lube
7	1-0935	WASHER
8	1-1022	HUB-CAP
9	1-1032	SEAL, Felt
10	3-1038	CAP, Dust
11	9-0364	COTTER-PIN

(OPTION)

NOT SHOWN: 1-0821 TUBE, Inner (For 4.10/3.50x4 Tire)

WHEELS - REAR

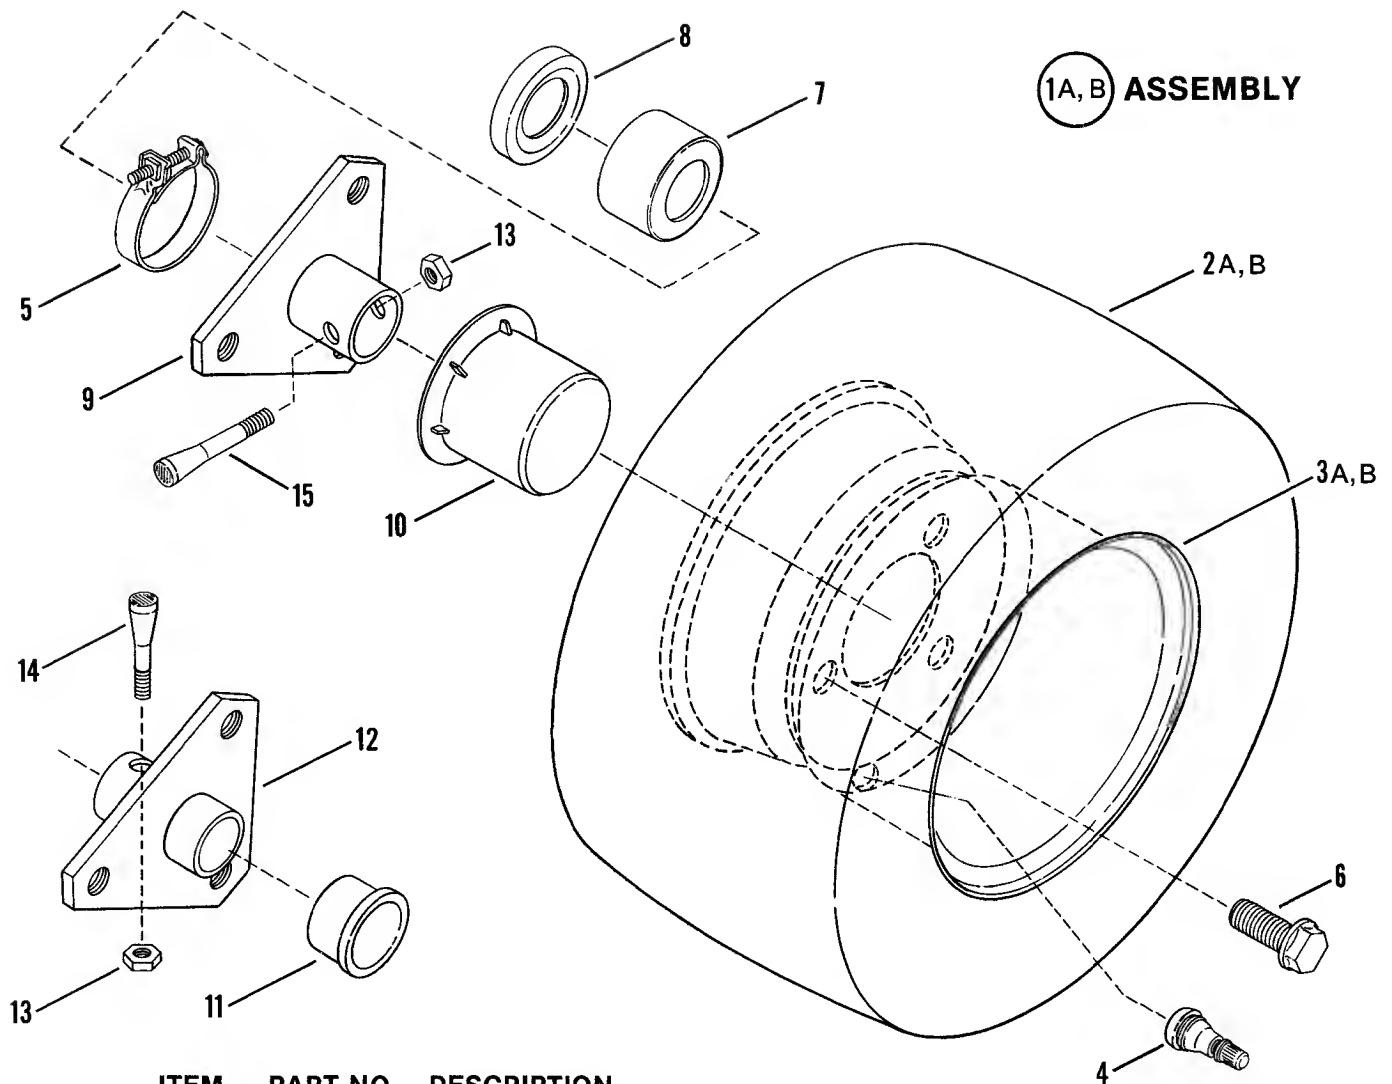


ITEM	PART NO.	DESCRIPTION
1A	5-0714	ASSEMBLY, Rear Tire & Rim (Includes items 2A,3A,4) (25 & 26" Models)
1B	5-1718	ASSEMBLY, Rear Tire & Rim (Includes items 2B,3B,4) (28 & 30" Models)
2A	1-0524	TIRE, Std., 4.80/4.00x8
2B	1-5968	TIRE, Wide, 16/6.50x8
3A	1-2162	RIM, Std., (For 4.80/4.00x8 Tire)
3B	1-2163	RIM, Wide, (For 16/6.50x8 Tire)
4	1-2234	VALVE, Air (Snap-in)
5	1-1037	CLAMP
6	9-0367	BOLT, 1/2-20x3/4" Lug (6)
7	3-1732	CAP, Seal, Right Hand
8	1-1817	SEAL, Oil
9	4-0433	HUB, Rear Wheel, Right Hand
10	1-1052	HUB-CAP
11	1-0967	CAP, Seal, Left Hand
12	4-0434	HUB, Rear Wheel, Left Hand
13	1-1201	NUT, 5/16-24 Lock
14	1-1035	BOLT, 5/16-24x1-5/8" ,Tapered, Left Hand
15	1-1013	BOLT, 5/16-24x2" ,Tapered, Right Hand

(OPTION)

NOT SHOWN: 1-0525 TUBE, Inner (For 4.80/4.00x8 Tire)

FRONT END - STEERING

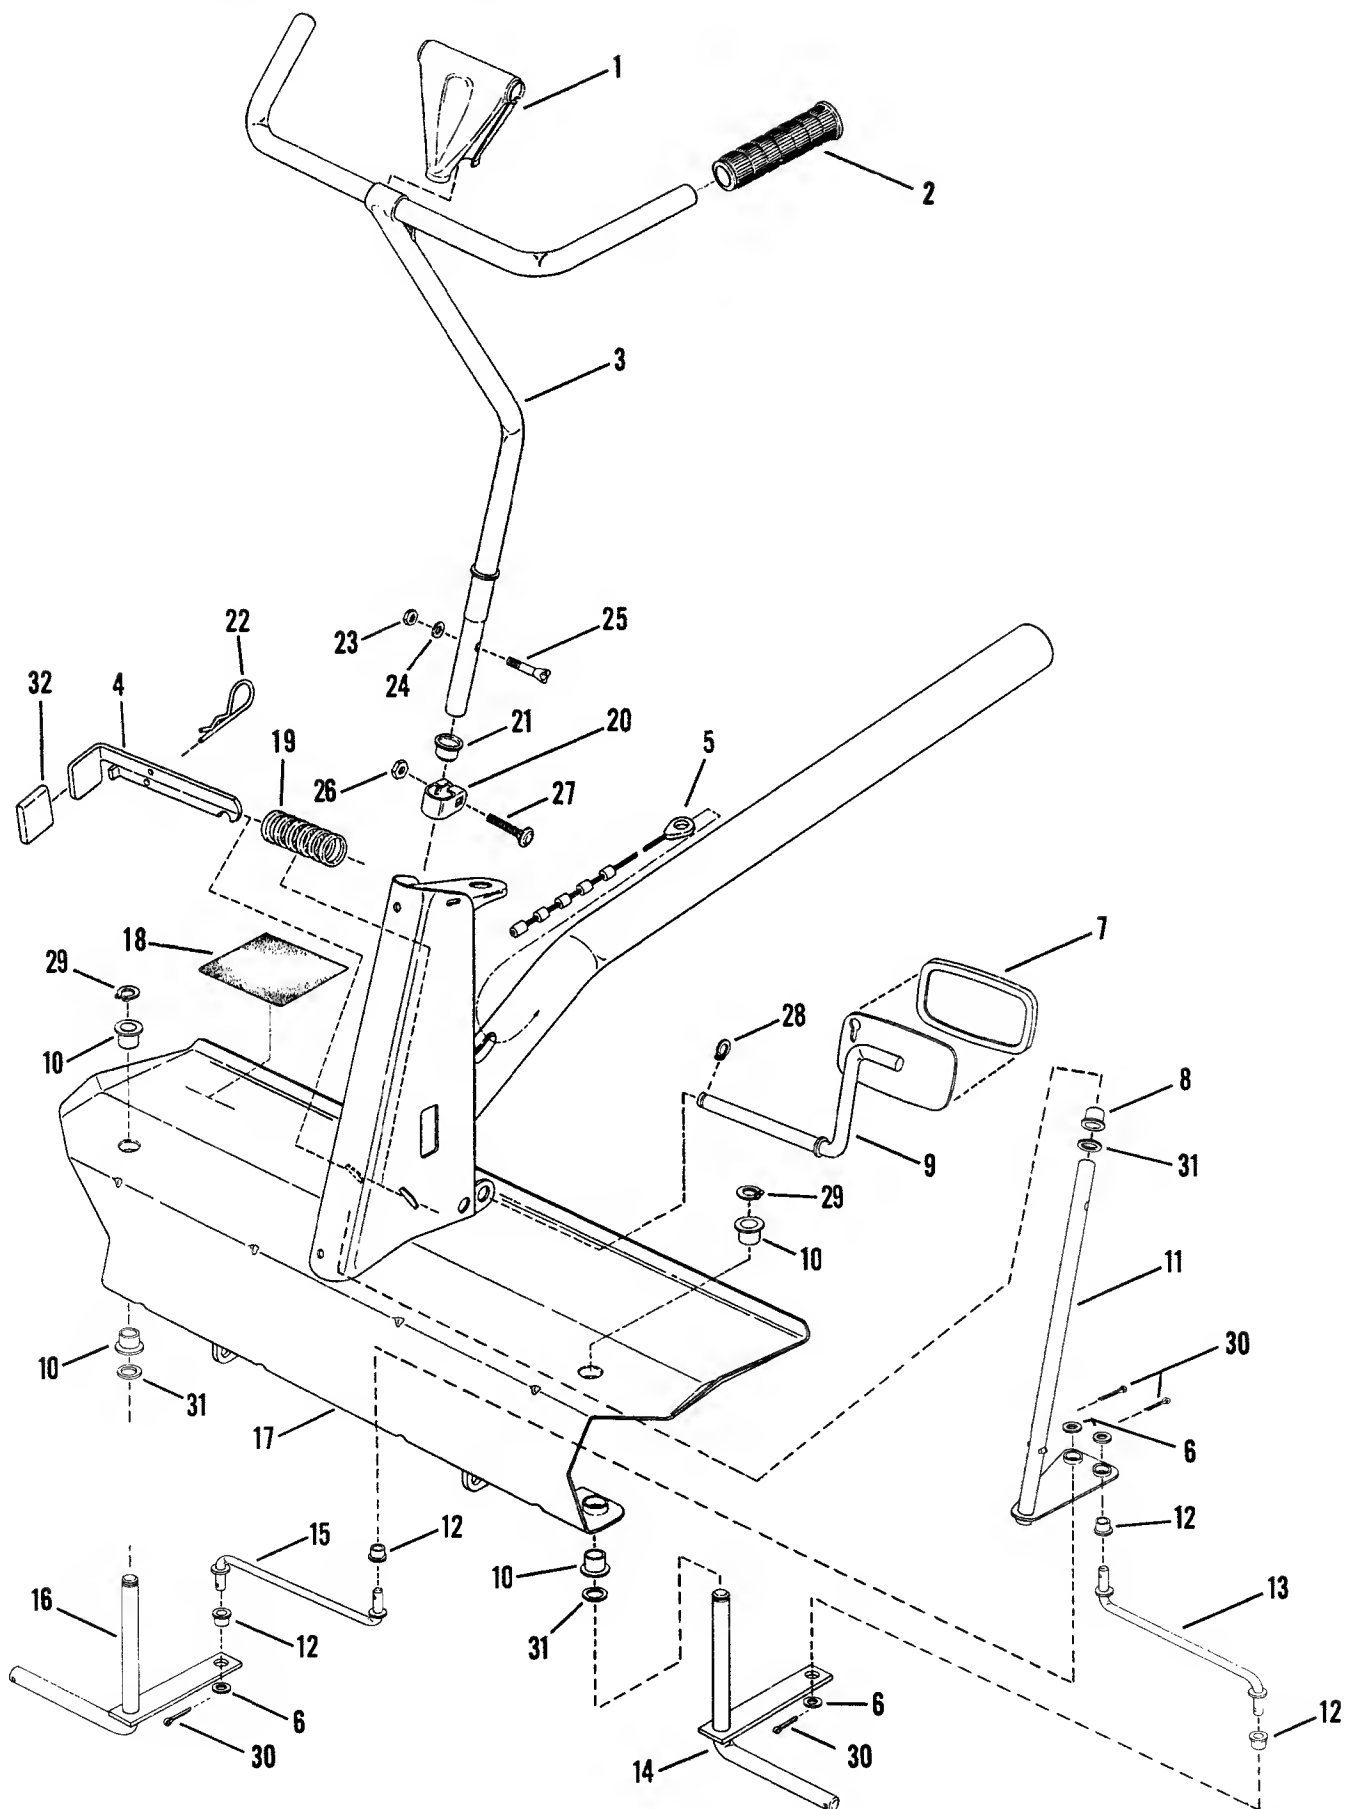


ITEM	PART NO.	DESCRIPTION
1	1-9517	COVER, Handle
2	1-2031	GRIP, Handle
3	1-9669	HANDLE, Steering
4	3-8243	Latch, Parking Brake
5	1-5476	CABLE, Clutch/Brake (46.1" Yellow)
6	9-0122	WASHER, 3/8 Flat (4)
7	1-1815	PAD, Clutch/Brake Pedal
8	1-0694	BUSHING, Nylon
9	4-7888	PEDAL, Clutch/Brake
10	1-0986	BEARING (4)
11	4-0457	SHAFT, Steering
12	1-3321	BUSHING, Tie-Rod (4)
13	1-3023	TIE-ROD, Left Hand
14	4-0362	KING-PIN, Left Hand
15	1-2933	TIE-ROD, Right Hand
16	4-0361	KING-PIN, Right Hand
17	4-9974	FRONT AXLE STRUCTURE (25 thru 30" Std.)
18	1-4049	PAD, Foot (2)
19	1-5444	SPRING, Parking Brake
20	3-2009	CLAMP, Steering
21	1-2617	BUSHING, Nylon
22	1-1714	PIN, Hair
23	9-0095	NUT, 1/4-28 Hex
24	9-0053	WASHER, 1/4 Internal Tooth Lock
25	1-2175	BOLT, 1/4-28 Tapered Head
26	9-0196	NUT, 5/16-18 Hex
27	9-0577	BOLT, 5/16-18x1 1/2" Carriage
28	1-0776	RING, Retaining
29	1-0746	RING, Retaining (2)
30	9-0365	COTTER-PIN, 1/8x3/4 (4)
31	1-0935	WASHER, 5/8 Flat (2)
32	1-5429	CAP, Parking Brake Lever

This technical drawing is an exploded view of a mechanical assembly, likely a door latch or lock mechanism. The components are numbered 1 through 44. The main body (1) is a rectangular plate with a central circular opening. A handle (2) is attached to the top. A latch bolt (3) is shown extending from the side. A strike plate (4) is shown on the right. A spring (5) is shown at the bottom. A handle (6) is shown on the left. A handle (7) is shown on the right. A handle (8) is shown at the bottom. A handle (9) is shown on the right. A handle (10) is shown at the bottom. A handle (11) is shown on the right. A handle (12) is shown at the bottom. A handle (13) is shown on the right. A handle (14) is shown at the bottom. A handle (15) is shown on the right. A handle (16) is shown at the bottom. A handle (17) is shown on the right. A handle (18) is shown at the bottom. A handle (19) is shown on the right. A handle (20) is shown at the bottom. A handle (21) is shown on the right. A handle (22) is shown at the bottom. A handle (23) is shown on the right. A handle (24) is shown at the bottom. A handle (25) is shown on the right. A handle (26) is shown at the bottom. A handle (27) is shown on the right. A handle (28) is shown at the bottom. A handle (29) is shown on the right. A handle (30) is shown at the bottom. A handle (31) is shown on the right. A handle (32) is shown at the bottom. A handle (33) is shown on the right. A handle (34) is shown at the bottom. A handle (35) is shown on the right. A handle (36) is shown at the bottom. A handle (37) is shown on the right. A handle (38) is shown at the bottom. A handle (39) is shown on the right. A handle (40) is shown at the bottom. A handle (41) is shown on the right. A handle (42) is shown at the bottom. A handle (43) is shown on the right. A handle (44) is shown at the bottom.

ITEM	PART NO.	DESCRIPTION
1	1-0153	CAP, Bumper (2)
2	3-0798	BUMPER, Rear (2)
3	3-1063	PLATE, Hitch
4	1-1016	BUSHING, Nylon (2)
5	1-1017	LINK, Shift, Long
6	4-0340	ARM, Shift
7	1-1018	LINK, Shift, Short
8	3-7291	BRACE, Cross
9	3-7285	FENDER, Left Hand
10	1-0817	FITTING, Lube
11	4-0341	ARM, Shift Handle
12	1-0754	SPRING, Shift Handle
13	4-0536	DETENT, Shift (87 & Earlier Models)
13A	4-0546	DETENT, Shift (88 & Later Models)
14	1-1021	CLEVIS-PIN, 3/8x1-1/4"
15	5-0681	SWITCH, Interlock, Assembly (87 & Earlier Models)
15A	1-5707	SWITCH, Interlock (88 & Later Models)
16	3-1861	PROTECTOR, Switch (87 & Earlier Models)
17	4-0284	HANDLE, Shift
18	1-4766	KNOB, Shifter Ball
19	3-1100	CLAMP, Main Tube
20	1-1033	GROMMET, Main Tube (2)
21	4-9736	MAIN-CASE,
22	3-8240	PANEL, Switch
23	3-1087	WASHER, Clip (Tecumseh 5-6 HP)
24	1-2652	CLIP, Wire
25	9-0368	SCREW, 5/16-18x3/4" Self-Tapping
26	9-0391	WASHER, 5/16 Internal Tooth Lock
27	3-1954	SUPPORT, Bumper
28	9-0484	SCREW, 5/16-18x1 1/2" , Self-Tapping
29	9-0223	NUT, 5/16-24 Hex (4)
30	9-0187	LOCKWASHER, 5/16 Split Lock (4)
31	9-0188	WASHER, 5/16 Flat (4)
32	1-1791	RETAINER, Bolt (4)
33	9-0242	SCREW, 5/16-24x1-1/2" Hex Cap (4)
34	9-0361	SCREW, 5/16-18x5/8" , Self-Tapping
35	9-0196	NUT, 5/16-18 Hex
36	3-1036	WASHER, Thrust
37	9-0037	PIN, 3/32x3/4", Cotter
38	9-0010	WASHER, #10 Flat (87 & Earlier Models)
39	9-0307	SCREW, #10-24x1/2" Hex, Self-Tapping (87 & Earlier Models)
40	9-0480	NUT, 5/16-24 Hex Flange Lock
41	9-0358	SCREW, 5/16-24x2-1/2" Hex Cap
42	9-0539	SCREW, 1/4-20x1/2" Self-Tapping
43	9-0324	SCREW, 3/8-16x1" Self-Tapping
44	1-1968	ROLLER


SMOOTH CLUTCH ASSEMBLY

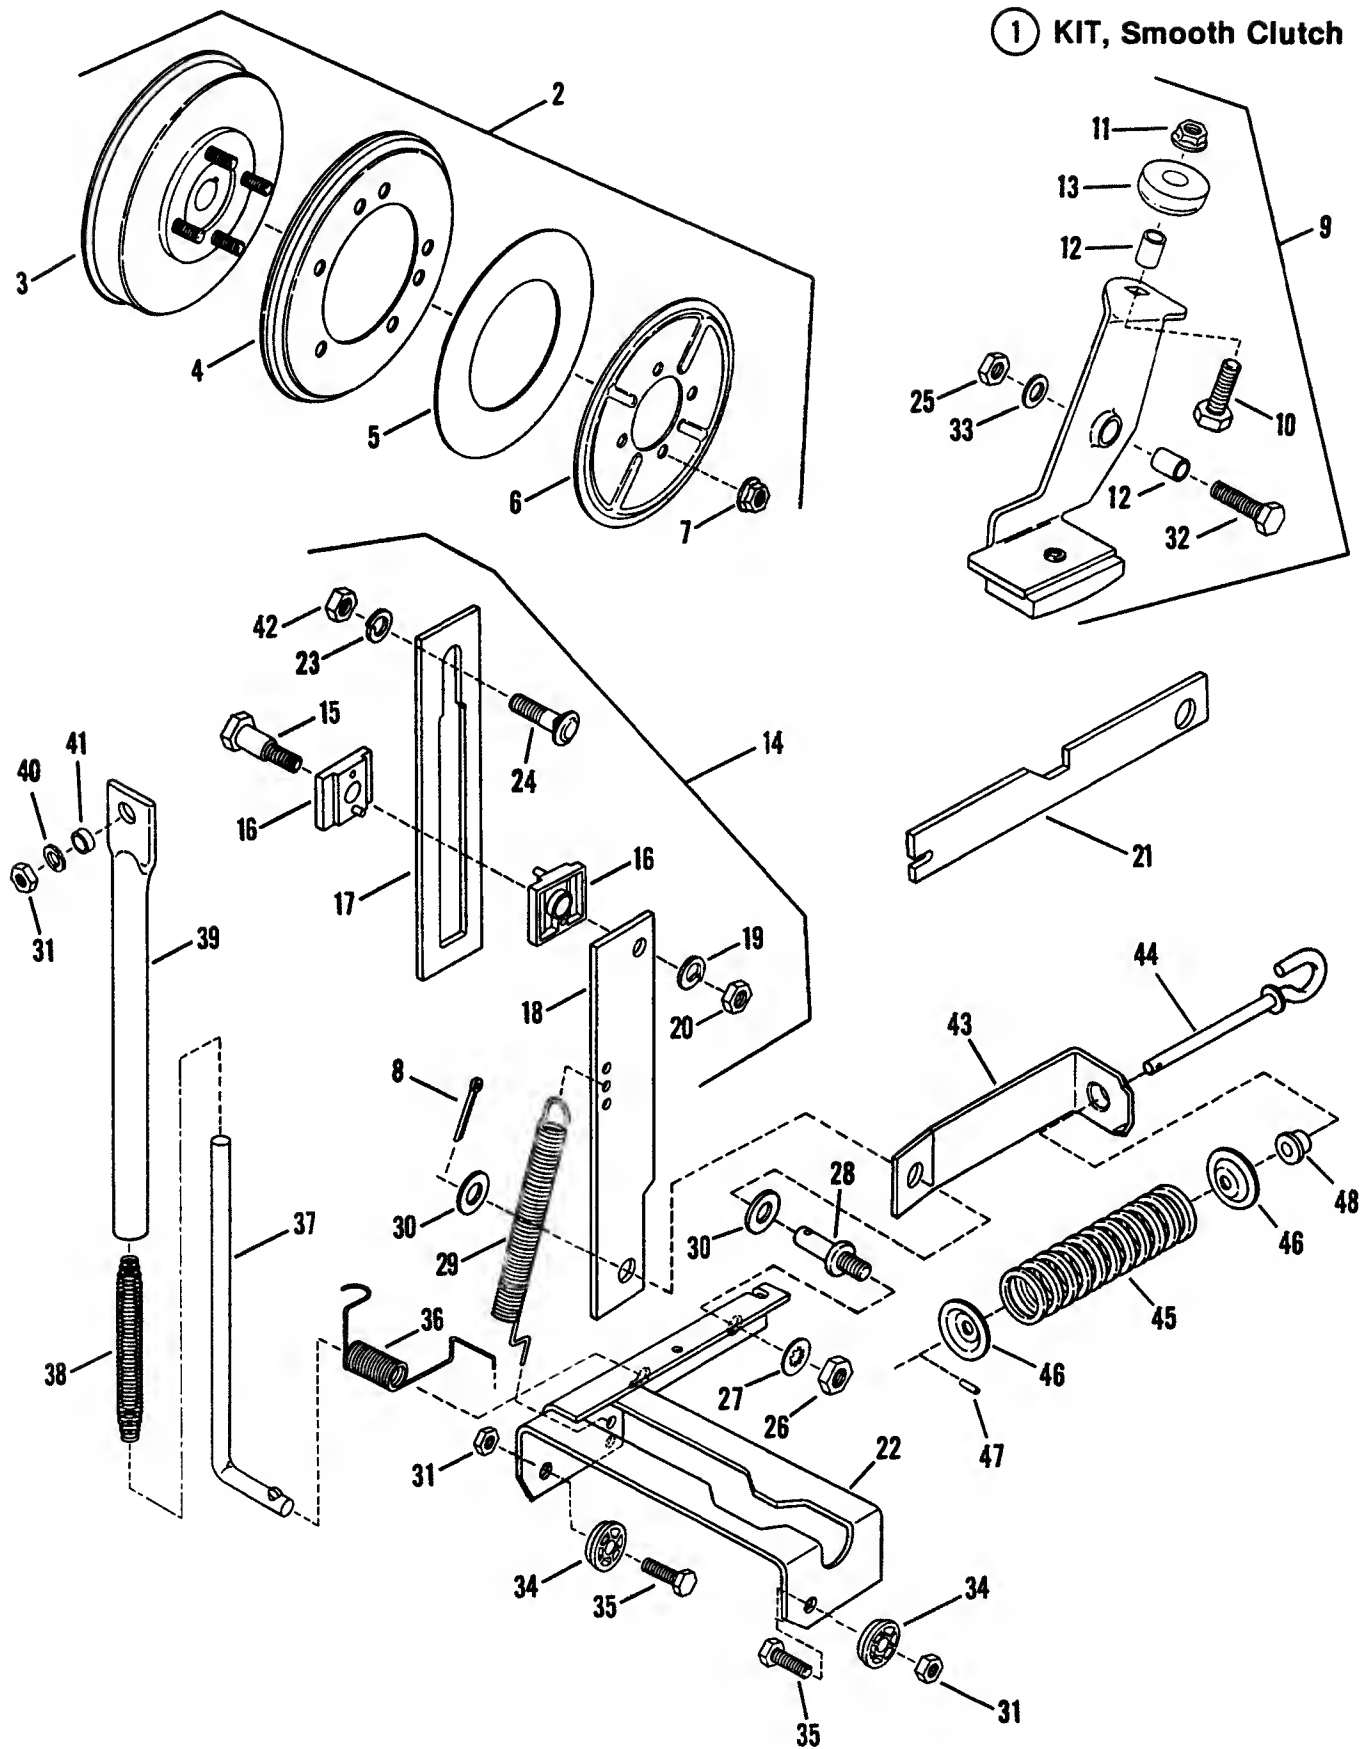

SMOOTH CLUTCH ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1	-	KIT, Smooth Clutch (Includes items 2 thru 30)
2	-	ASSEMBLY, Smooth Clutch (Includes items 3 thru 7)
3	5-7338	HUB, Driven Disc
4	5-7423	DISC, Driven
5	1-4523	WASHER, Thrust
6	3-2331	PLATE
7	9-0585	NUT, 5/16-24 Hex Flange Lock
8	9-0038	COTTER-PIN 3/32x1"
9	5-1603	ASSEMBLY, Brake Lever (Includes items 10 thru 13)
10	9-0073	SCREW, 1/4-20x3/4" Hex Head Cap (Gr. 5)
11	9-0477	NUT, 1/4-20 Hex Flange Lock
12	1-0916	SPACER
13	1-5278	ROLLER, Brake
14	5-1474	ASSEMBLY, Guide & Link (Includes items 15 thru 20)
15	1-4664	BOLT, 5/16-18x1/2" Shoulder
16	1-4663	SIDE HALF
17	3-2370	GUIDE, Clutch Link
18	3-2371	LINK, Clutch
19	9-0187	WASHER, 5/16 Split Lock
20	9-0196	NUT, 5/16-18 Hex
21	3-2392	TOOL, Smooth Clutch
22	4-7887	LIFT, Yoke (Not included in kit)
23	9-0118	WASHER, 3/8 Split Lock
24	9-0850	BOLT, 3/8-16x3/4" Short Neck Carriage
25	9-0303	NUT, 1/4-28 Hex Lock
26	9-0155	NUT, 3/8-24 Hex
27	9-0390	WASHER, 3/8 Internal Tooth Lock
28	1-5464	STUD, Clutch Link
29	1-3885	SPRING, Clutch Brake
30	9-0122	WASHER, 3/8 Flat
31	9-0222	NUT, 5/16-24 Hex Lock
32	9-0535	SCREW, 1/4-28x1" Hex Head Cap
33	9-0055	WASHER, 1/4 Flat
34	1-1048	BEARING, Yoke
35	9-0233	SCREW, 5/16-24x3/4" Hex Head Cap
36	1-1821	SPRING
37	3-1729	ROD
38	1-4771	SPRING
39	2-1706	TUBE
40	9-0187	WASHER, 5/16 Split Lock
41	1-1968	ROLLER
42	9-0130	NUT, 3/8-16 Hex
-	5-7445	ASSEMBLY, Overtravel Spring (Includes items 43 thru 48)
43	3-8242	BRACKET, Spring
44	4-0537	ROD, Spring
45	1-5442	SPRING
46	1-5440	WASHER, Flange (2)
47	1-5439	PIN, Spiral
48	1-5507	BUSHING

DIFFERENTIAL, RH FENDER

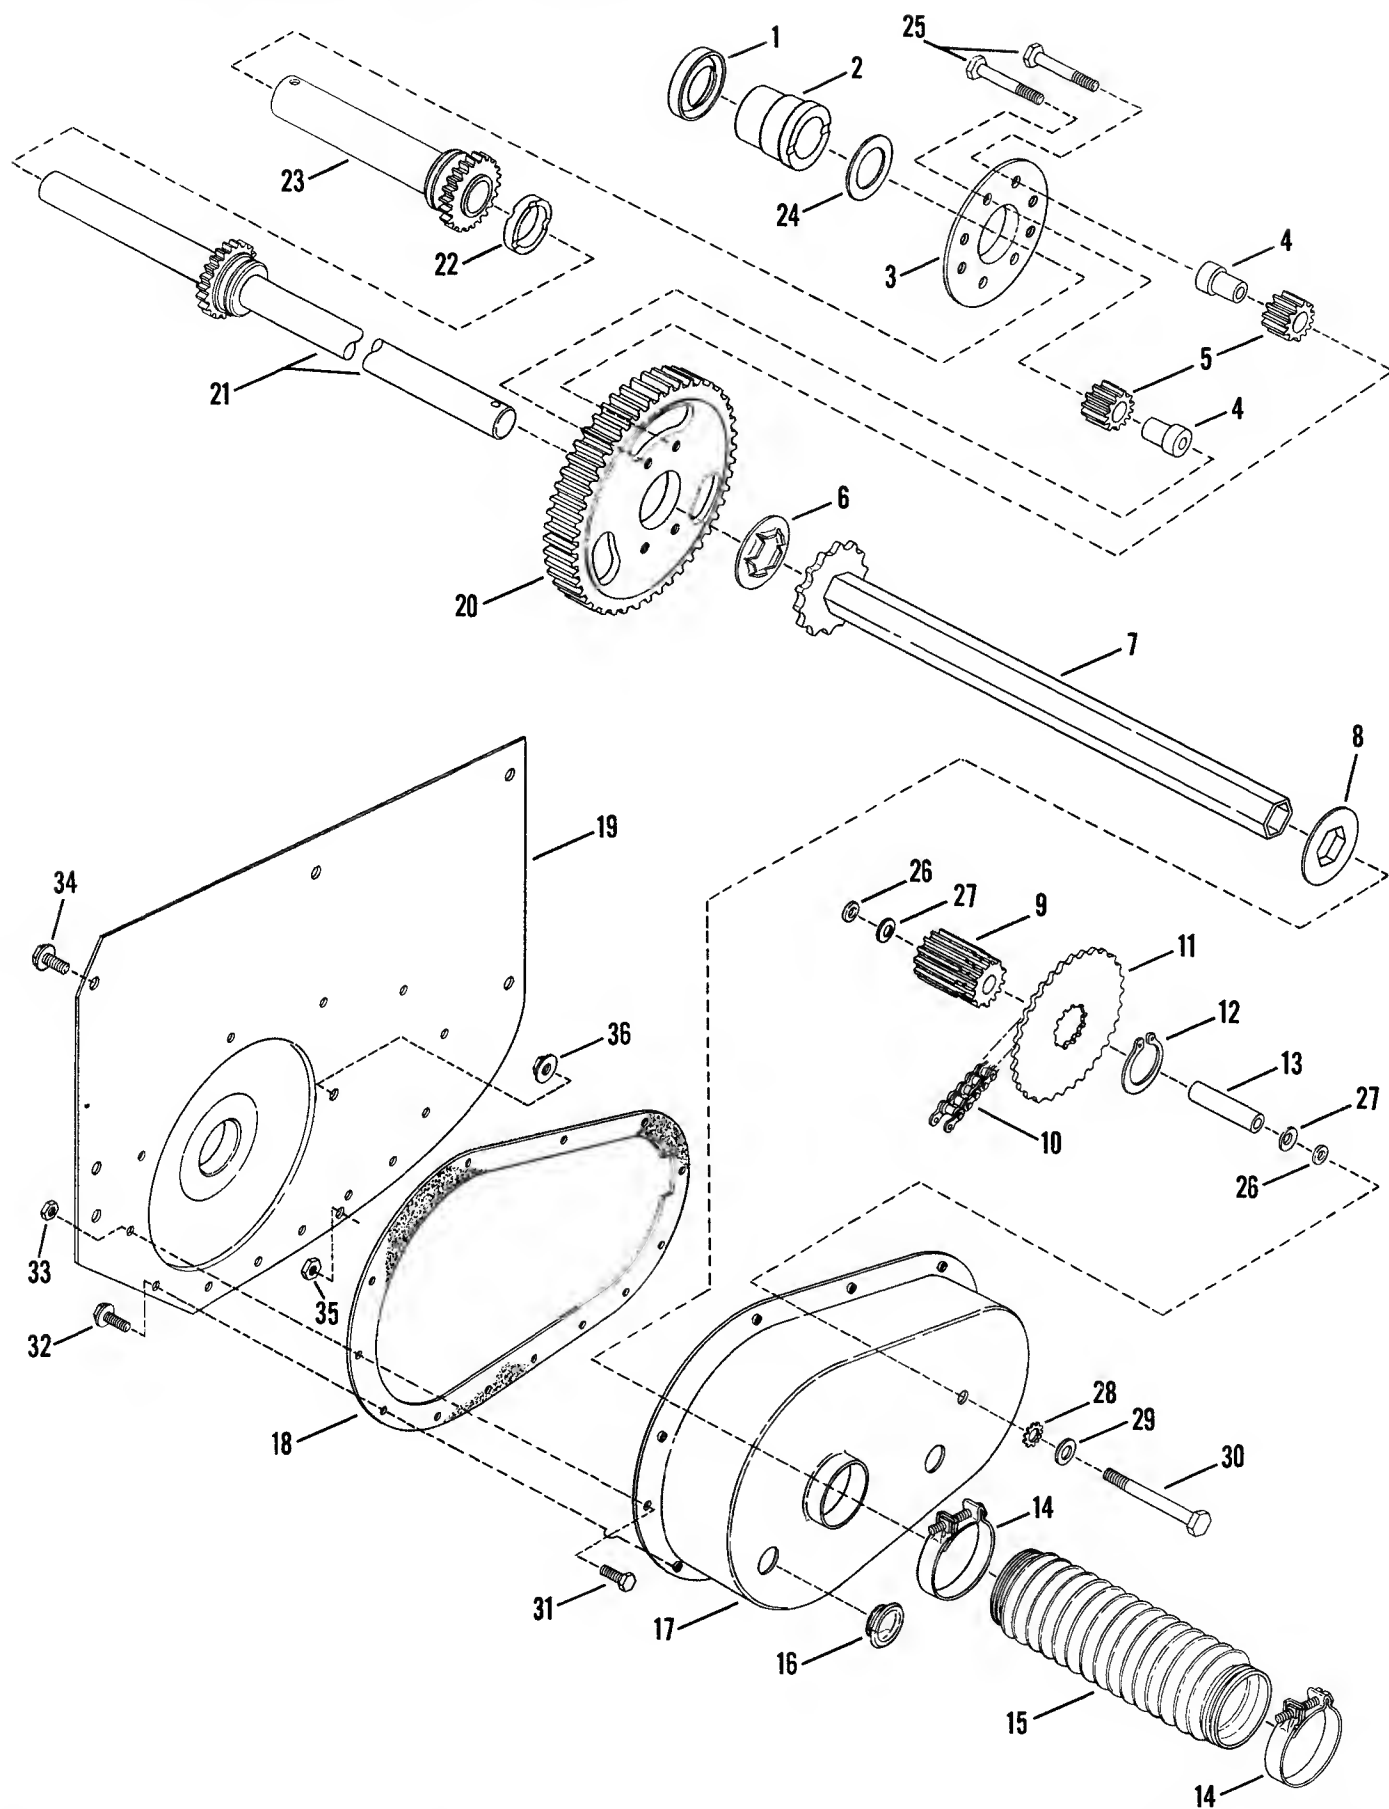


DIFFERENTIAL, RH FENDER

ITEM	PART NO.	DESCRIPTION
--	6-0278	KIT, Bearing and Seal
1	1-1817	SEAL, Oil
2	1-2296	BEARING, Axle (Right Hand Fender)
3	3-8067	PLATE, Differential
4	2-1126	SPACER, Pinion (4)
5	2-1127	PINION GEARS, Differential (4)
6	1-1072	WASHER, Thrust
7	5-1584	ASSEMBLY, Drive Hex Tube
8	1-0988	WASHER, Hex Insert Nylon Splash
9	1-0964	GEAR, 11 Teeth-10 Pitch
10	1-0941	CHAIN, 46 Pitch (#35)
11	2-1129	SPROCKET
12	1-0965	RING, External Retaining
13	2-1128	SPACER
14	1-1037	CLAMP, Boot (2)
15	1-1011	BOOT, Oil Seal
16	1-1024	PLUG, Oil Fill & Check (2)
17	3-7279	CASE, Transmission
18	1-8060	GASKET, Transmission Case
19	3-7280	FENDER, Right Hand
20	2-1158	GEAR, 63 Teeth-10 Pitch
21	4-7763	AXLE, Long (Includes Gear) (Use Only With Short Axle #5-7398)
22	1-1026	SPACER
23	5-7398	AXLE, Short (Includes Gear) (Use Only With Long Axle #4-7763)
24	3-1079	WASHER, Thrust
25	1-2333	SCREW, 5/16-24 x 1-5/8" Hex Cap Special Lock (4)
26	1-1156	O-RING, 5/16" (2)
27	1-1782	WASHER, 5/16" Belleville (2)
28	9-0395	WASHER, 5/16" External Tooth Lock
29	9-0188	WASHER, 5/16" Flat
30	1-1042	BOLT, 5/16-24 x 2-5/8" Idler
31	9-0072	SCREW, 1/4-20 x 5/8" Hex Head Cap
32	9-0362	SCREW, 1/4-20 x 5/8" Self-Tapping (13)
33	9-0372	NUT, 1/4-20 Hex Center Lock, Grade 5 or B
34	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (11)
35	9-0223	NUT, 5/16-24 Hex Flange Lock
36	1-0969	NUT, 5/16-24 Hex Flange Lock
--	6-0411	KIT, Differential (Includes items 2 and 19)
--	6-0662	KIT, Differential (Includes Ball Bearing for item 2 and 3-7957 Fender for item 19)
--	6-0278	KIT, Fender Bearing & Seal

CHAIN CASE, LH FENDER


① ASSEMBLY

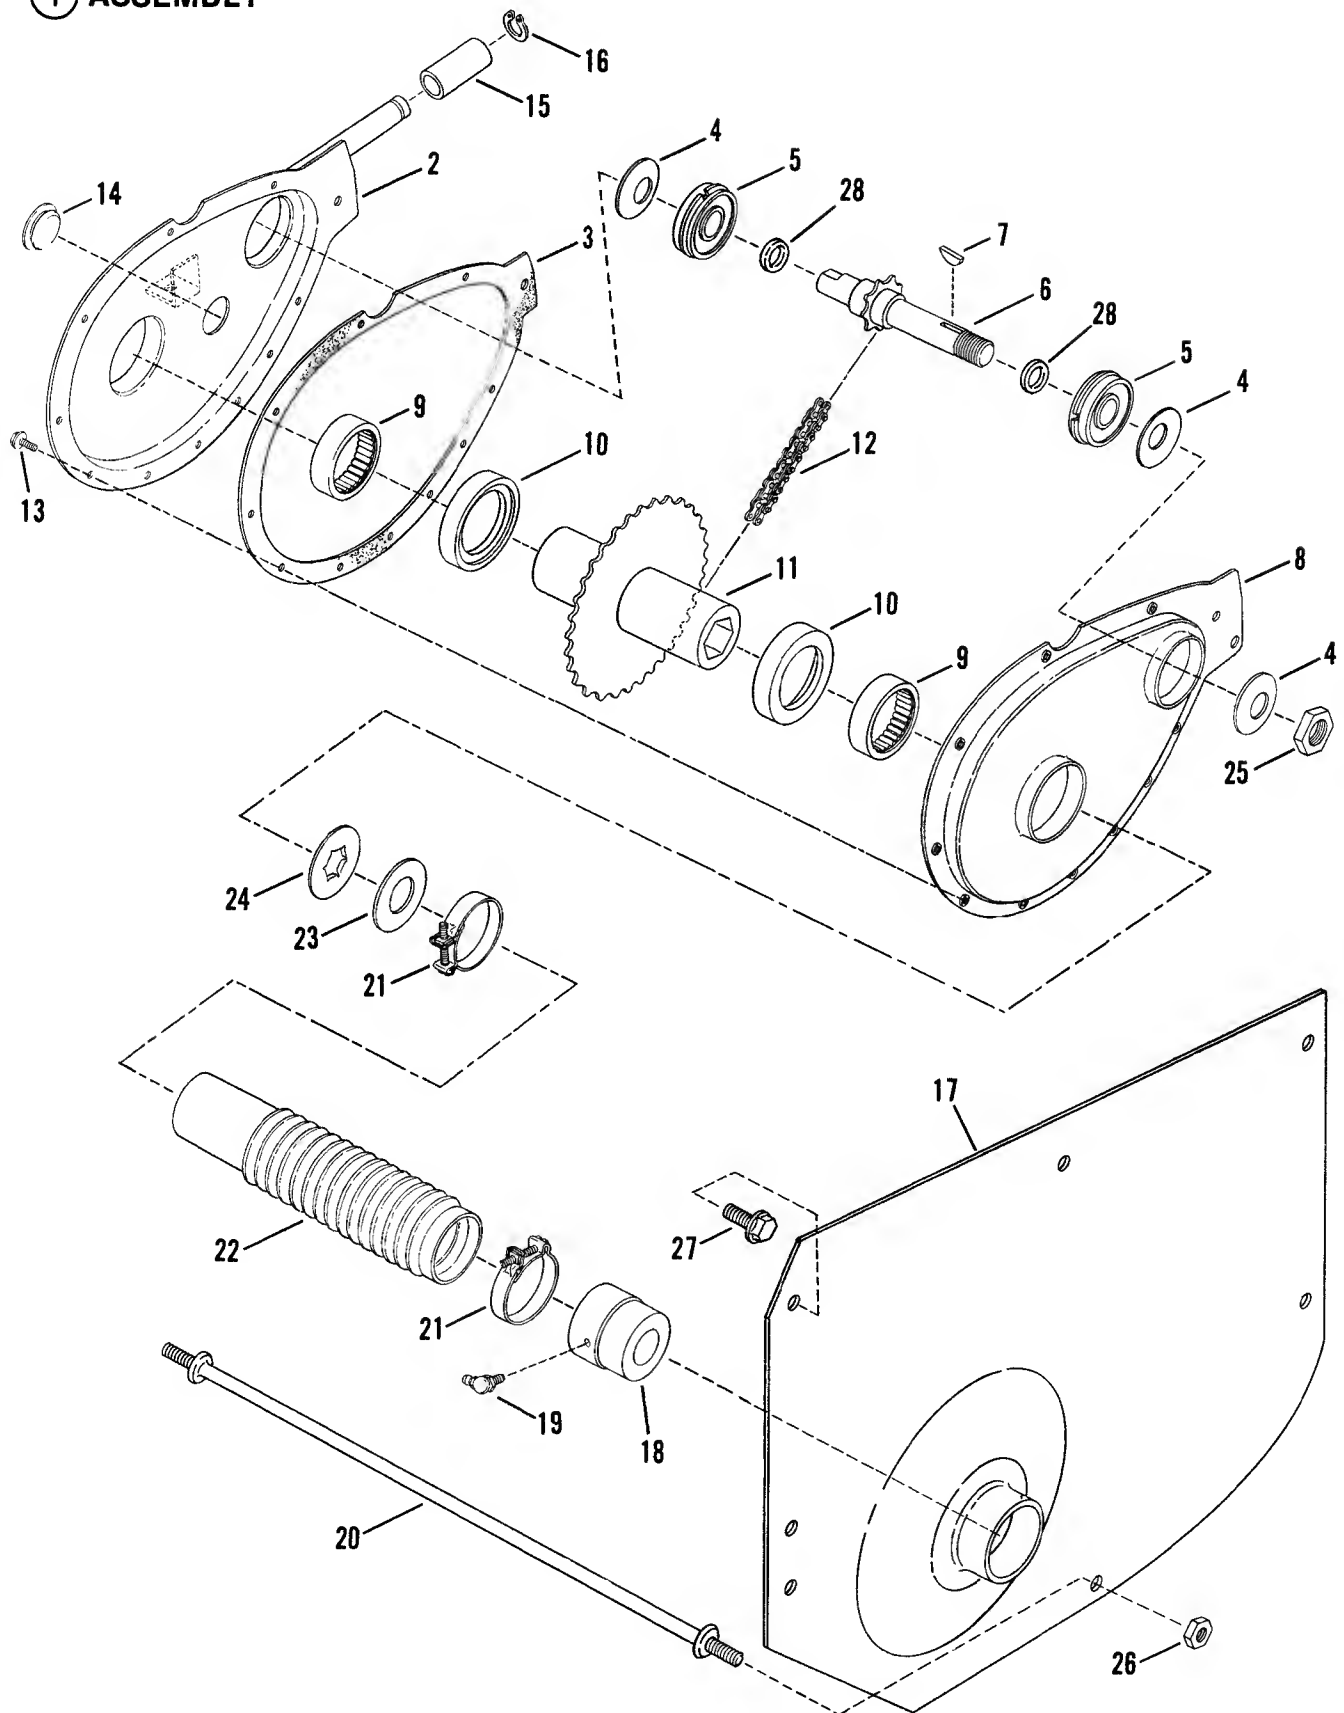

CHAIN CASE, LH FENDER

ITEM	PART NO.	DESCRIPTION
1	5-9688	ASSEMBLY, Chain Case (Includes items 2 thru 13)
2	4-7889	CASE, Sprocket
3	1-8059	GASKET, Case-Cover
4	1-1121	WASHER, Belleville (2) (2 in Assembly, 1 loose)
5	1-0756	BEARING, Ball (2)
6	1-0940	SPROCKET & SHAFT
7	1-0614	KEY, Woodruff
8	3-9778	COVER, Chain Case
9	1-0942	BEARING, Needle (2)
10	1-1086	WASHER, Nylon Thrust
11	4-0355	HUB & SPROCKET
12	1-0941	CHAIN
13	9-0307	SCREW, #10-24x5/8 Self-Tapping (10)
14	1-1024	PLUG, Oil Fill & Check
15	2-0908	ROLLER
16	1-0776	RING, Retaining
17	3-7285	FENDER, Left Hand
18	5-0918	BEARING, Fender (Includes item 19)
19	1-3324	FITTING, Lube
20	1-1070	ROD, Cross Tie
21	1-1037	CLAMP, Boot (2)
22	1-7084	BOOT, Oil Seal (Long)
23	1-1071	WASHER, Thrust Nylon
24	1-1072	WASHER, Thrust
25	9-0356	NUT, 5/8-18 Hex Lock
26	9-0223	NUT, 5/16-24 Hex
27	9-0361	SCREW, 5/16-18x5/8" Self-Tapping
28	1-4508	"O"-Ring (2)
29	6-0277	KIT, Shim (Includes Boldface Items Above and 1-2271, Shim Washer (Split))

CUTTING DECKS, DEFLECTORS

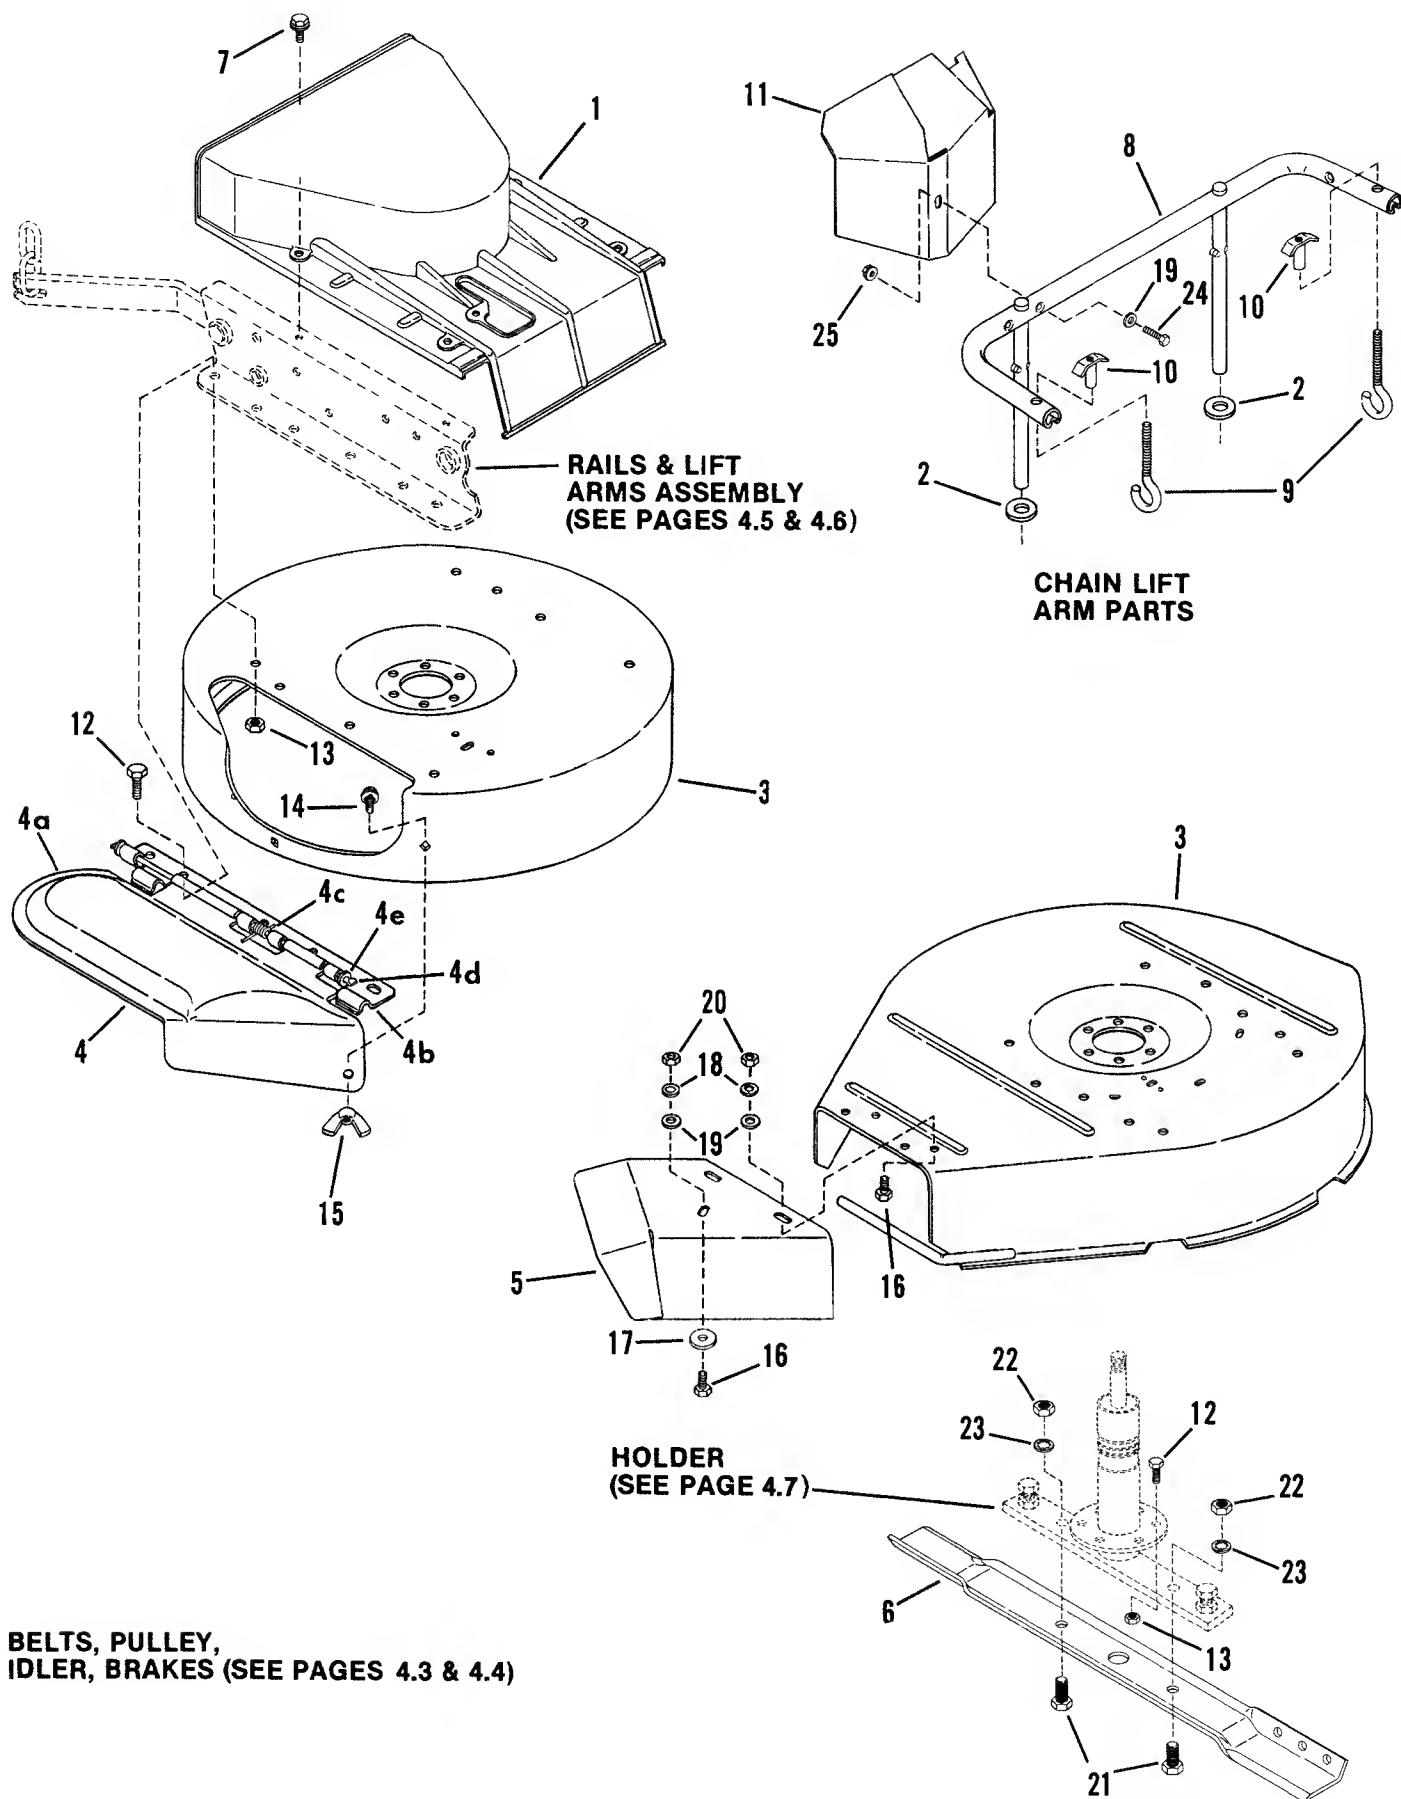


CUTTING DECKS, DEFLECTORS

ITEM	PART NO.	DESCRIPTION
1	5-7458	COVER, Spindle (Auto. Blade Stop Models)
2	9-0183	WASHER, 5/8 Flat (2)
3	3-9823	25" DECK (*See Note below for complete cutter unit)
-	4-7325	26" DECK (*See Note below for complete cutter unit)
-	3-9821	28" DECK (*See Note below for complete cutter unit)
-	4-7323	30" DECK (*See Note below for complete cutter unit)
4	5-9531	25" DEFLECTOR ASSEMBLY (Includes 4a,b,c,d,e)
-	5-9532	28" DEFLECTOR ASSEMBLY (Includes 4a,b,c,d,e)
4a	3-9605	25" DEFLECTOR, Discharge
-	3-9615	28" DEFLECTOR, Discharge
4b	3-9586	HINGE
4c	1-2303	SPRING, Hinge
4d	3-1914	PIN, Hinge
4e	9-0055	WASHER, 1/4" Flat
5	3-7334	DEFLECTOR, 26" & 30" Mowers
6	1-9518	25" BLADE
-	1-8068	26" BLADE
-	1-9515	28" BLADE
-	1-8069	30" BLADE
7	9-0741	SCREW, 1/4-20x5/8" Hex Washer Head Self-tapping (4)
8	4-7725	ARM, Chain Lift
9	1-2350	HOOK, Chain
10	3-1928	NUT, Chain Adjusting
11	3-5048	SHIELD, Engine Exhaust Heat
12	9-0292	SCREW, 3/8-24x3/4" Hex Head Cap
13	9-0289	NUT, 3/8-24 Hex Lock
14	9-0001	BOLT, 5/16-18x3/4" Short Neck Carriage
15	9-0492	NUT, 5/16-18 Wing
16	9-0541	SCREW, 1/4-28x3/4" Hex Head Cap
17	1-1763	WASHER, 5/16" Fender
18	9-0053	WASHER, 1/4 Internal Tooth Lock
19	9-0055	WASHER, 1/4 Flat
20	9-0095	NUT, 1/4-28 Hex
21	9-0392	SCREW, 1/2-20x1" Hex Head Cap
22	9-0559	NUT, 1/2-20 Hex Jam
23	9-0509	WASHER, 1/2 Internal Tooth Lock
24	9-0528	SCREW, 1/4-28x1-1/2" Hex Head Cap
25	9-0743	NUT, 1/4-28 Hex Flange Lock

*NOTE: For Complete Cutter Unit, order following numbers:

25" Replacement Deck - Complete Unit 6-0827
 26" Replacement Deck - Complete Unit 6-0826
 28" Replacement Deck - Complete Unit 6-0825
 30" Replacement Deck - Complete Unit 6-0824


BELTS, BRAKES, INTERLOCK

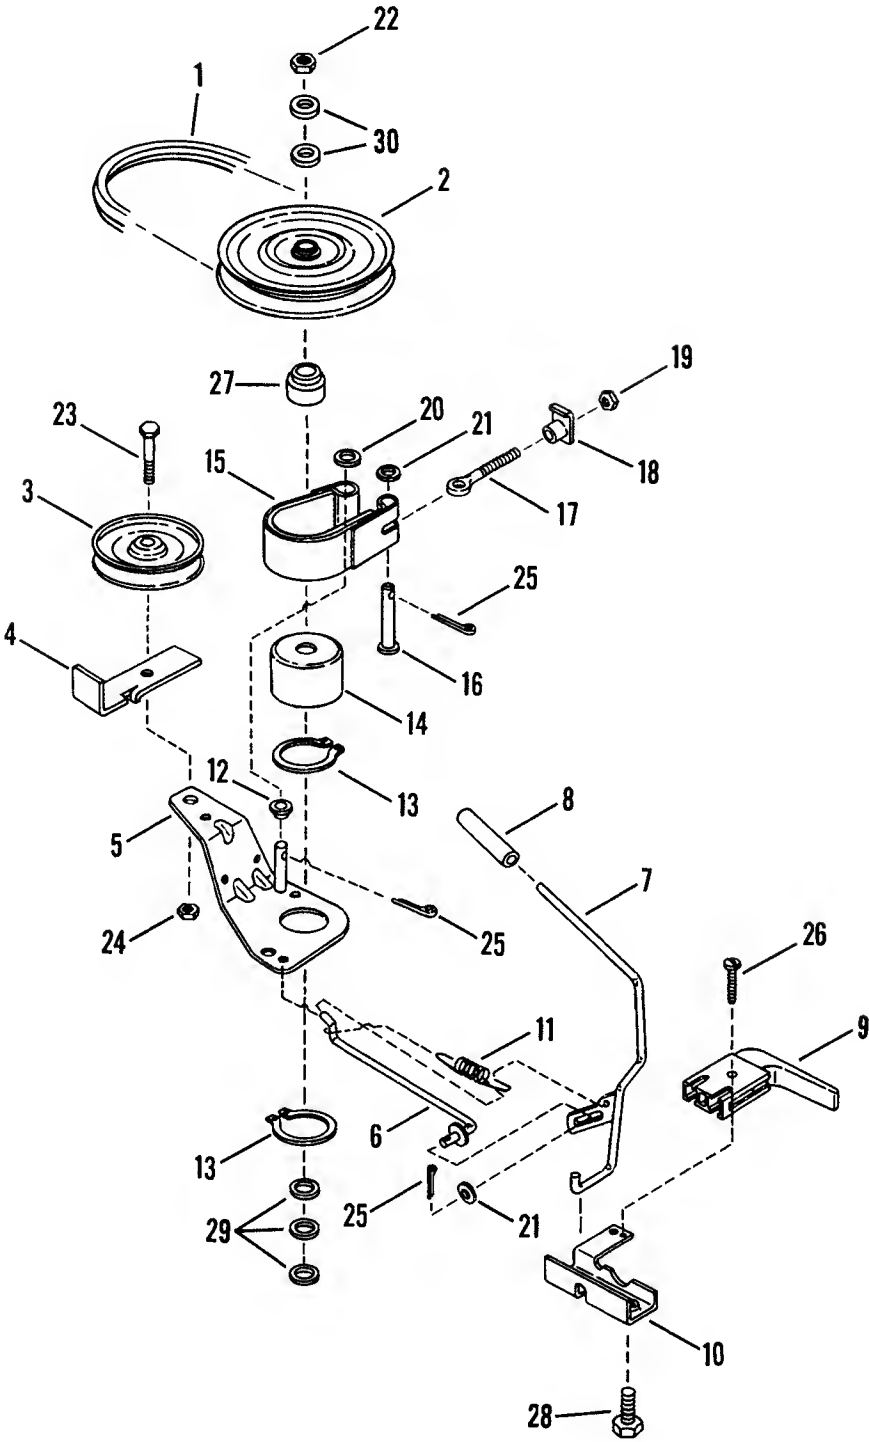

BELTS, BRAKES, INTERLOCK

ITEM	PART NO.	DESCRIPTION
1	1-0749	BELT, Drive AA68
2	1-8781	PULLEY, Spindle (Replaces 1-8587)
3	1-1029	PULLEY, Idler
4	3-2111	RESTRICTOR, Belt (Replaces 3-0982)
5	4-7787	ARM, Idler
6	1-2055	ROD, Idler
7	4-0472	HANDLE, Blade ON—OFF (Lever)
8	1-0681	GRIP, Handle
9	1-8524	SWITCH, Deck Interlock
10	3-8021	MOUNT, Handle
11	1-4168	SPRING, Blade Handle
12	1-4314	SPACER
13	1-0740	RING, Retainer
14	3-2169	DRUM, Brake
15	5-7307	BAND, Brake
16	1-4304	PIN, 1/4x1-5/8" Clevis
17	1-4302	BOLT, 1/4-20 Eye
18	1-4303	NUT, 1/4-20 Tee
19	9-0063	NUT, 1/4-20 Hex
20	9-0122	WASHER, 3/8 Flat
21	9-0055	WASHER, 1/4 Flat (2)
22	1-0027	NUT, 3/4-16 Hex Jam
23	9-0161	SCREW, 3/8-24x1-3/4" Hex Cap
24	9-0289	NUT, 3/8-24 Hex Lock
25	9-0037	PIN, 3/32x3/4" Cotter
26	9-0299	SCREW, #10-32x1" Self-Tapping
27	1-5290	HUB, Pulley
28	9-0362	SCREW, 1/4-20x5/8" Self-Tapping
29	1-0935	WASHER, 49/64x1-1/8" Flat (3)
30	3-2027	WASHER, 49/64x1-1/2" Flat (2)

RAILS, LIFT ARMS, CAM LIFT

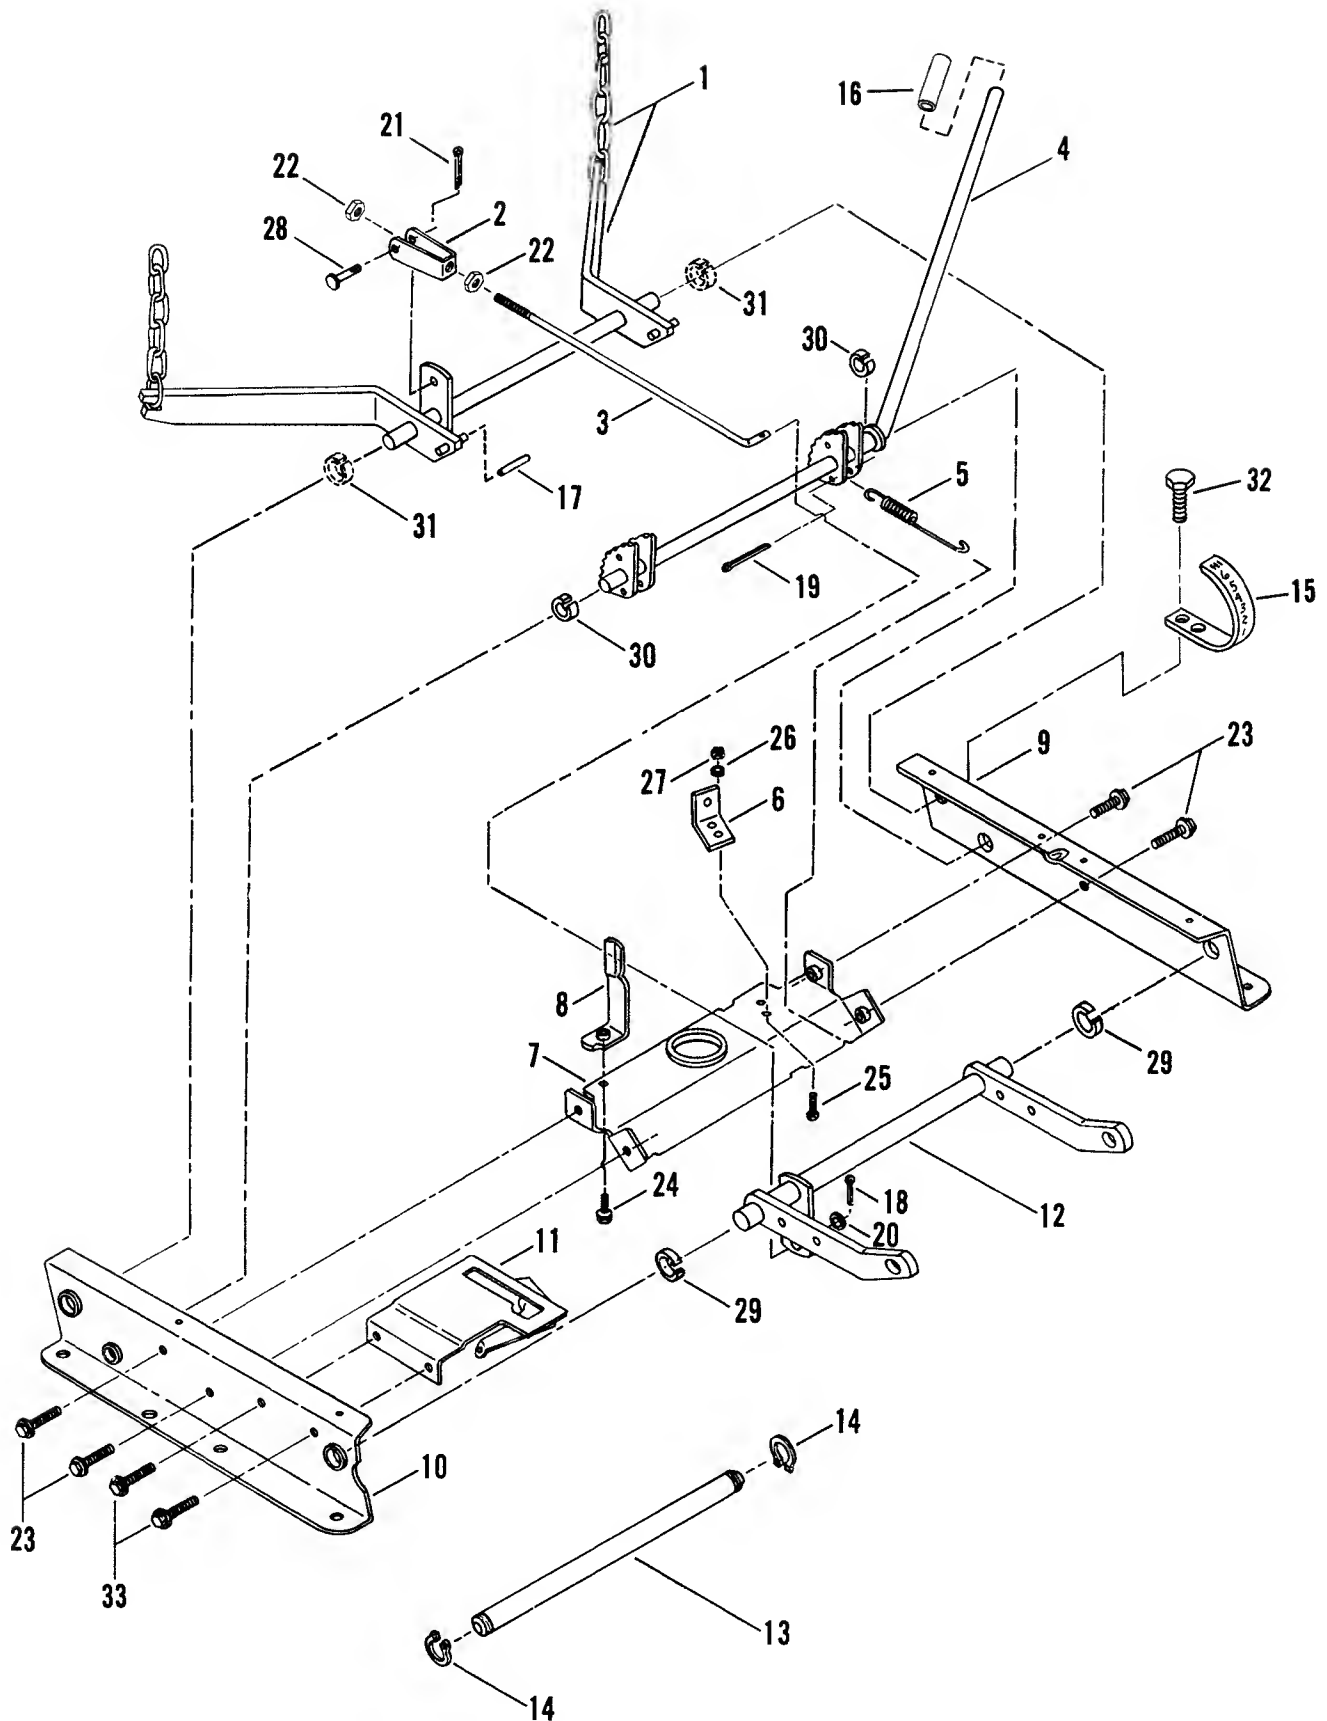


RAILS, LIFT ARMS, CAM LIFT

ITEM	PART NO.	DESCRIPTION
1	5-7283	REAR LIFT ARM ASSY (25,26,28,30" MODELS)
2	3-1837	CLEVIS, Timing Rod
3	1-2030	TIMING ROD
4	4-7730	CAM LIFT LEVER
5	1-1074	SPRING, Cam Lift
6	3-2243	ANCHOR (Auto. Blade Control Models)
7	3-1838	BRACE, Top
8	3-1855	GUIDE, Belt
9	3-7709	RAIL, Left Hand
10	3-7710	RAIL, Right Hand
11	5-1310	CLUTCH-PLATE (Auto. Blade Control Models)
12	4-7710	FRONT LIFT ARM (Non-Adjustable-25,26,28,30" Models)
13	2-0882	SUPPORT ROD (Front Lift Arm to Front End)
14	1-0739	RING, Retaining (2)
15	3-1975	PLATE, Indicator
16	1-0684	GRIP, Height Adjustment Lever
17	1-0737	PIN, Roll (Part of item 1)
18	9-0365	PIN, 1/8x3/4" Cotter
19	9-0364	PIN, 5/32x1" Cotter
20	9-0122	WASHER, 3/8 Flat
21	9-0037	PIN, 3/32x3/4" Cotter
22	9-0155	NUT, 3/8-24 Hex
23	9-0324	SCREW, 3/8-16x1" Hex Self-Tapping
24	9-0361	SCREW, 5/16-18x5/8" Hex Self-Tapping
25	9-0233	SCREW, 5/16Fx3/4" Hex Head Cap
26	9-0391	LOCKWASHER, 5/16 Internal Tooth
27	9-0223	NUT, 5/16-24 Hex
28	1-0736	PIN, Clevis
29	1-2067	RING, Red
30	1-0996	RING, White
31	1-2068	RING, Blue
32	9-0292	SCREW, 3/8-24x3/4 Hex Head Cap
33	9-0858	SCREW, 5/16-18x1/2" Self-Tapping (2)


SPINDLE

① ASSEMBLY

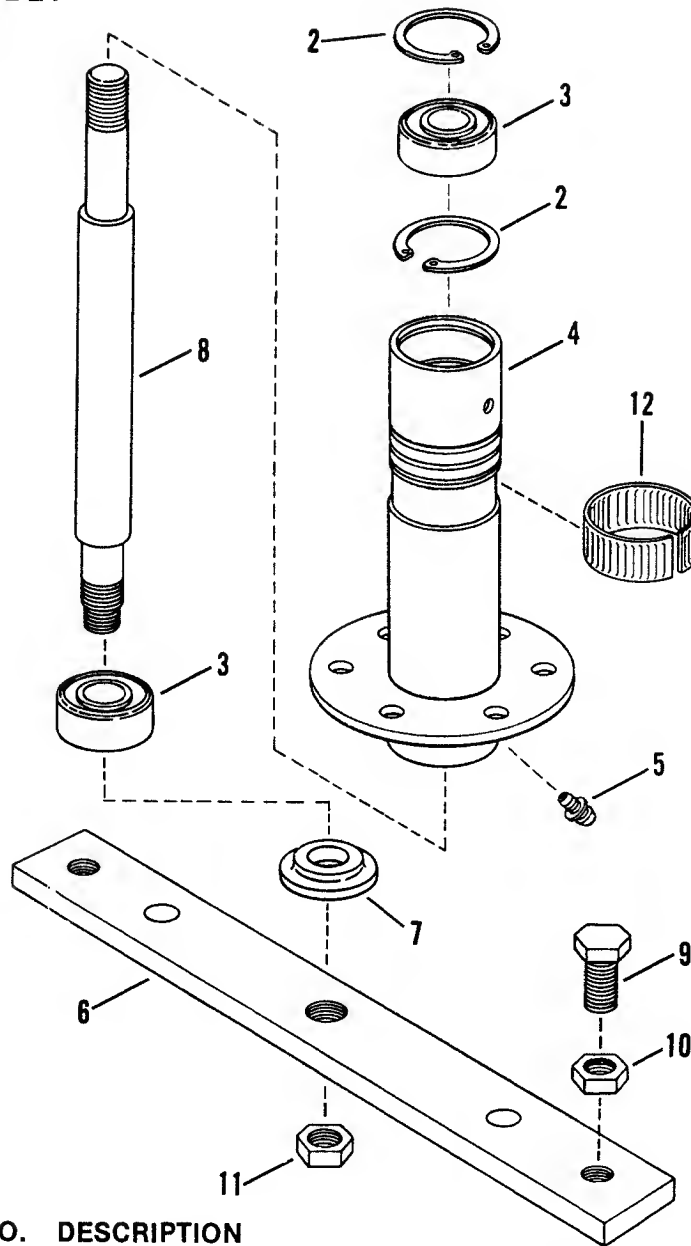


ITEM	PART NO.	DESCRIPTION
1	5-9813	ASSEMBLY, Spindle Housing (25" thru 30" decks) (Includes items 2 thru 11)
2	1-2491	RING, Retaining (2)
3	1-3313	BEARING, Spindle (2)
4	5-0696	HOUSING, Spindle (Includes item 5)
5	1-0817	FITTING, Lube
6	3-7751	HOLDER, Blade
7	1-4407	WASHER, Spindle
8	2-1742	SPINDLE 10.143"
9	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap (2) (Gr. 5)
10	9-0559	NUT, 1/2-20 Hex Jam (2)
11	9-0356	NUT, 5/8-18 Hex Lock
12	1-2670	RING, Tolerance
13	6-0332	KIT, Blade Holder (Includes Above Items in Boldface Type and two 9-0509 (1/2" Internal Tooth Lock Washer))

BLADE STOP PEDALS

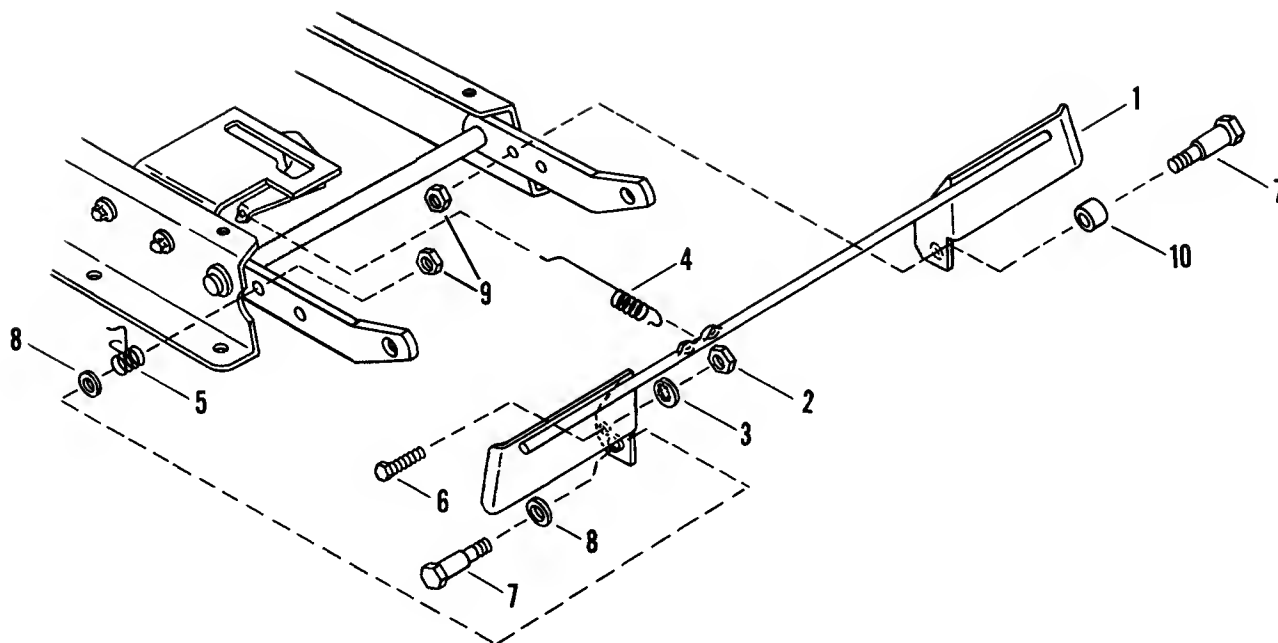

ITEM	PART NO.	DESCRIPTION
1	4-7788	PEDAL, Blade Stop Control
2	9-0095	NUT, 1/4-28 Hex
3	9-0053	WASHER, 1/4 Internal Tooth Lock
4	1-4320	SPRING, Latching
5	1-4166	SPRING, Pedal
6	9-0535	SCREW, 1/4-28x1" Hex Head Cap
7	1-4158	BOLT, 3/8-24x1 3/4" Shoulder (2)
8	9-0250	WASHER, 1/2 Flat (2)
9	9-0155	NUT, 3/8-24 Hex (2)
10	1-4394	SPACER

DRIVE DISC ASSEMBLY

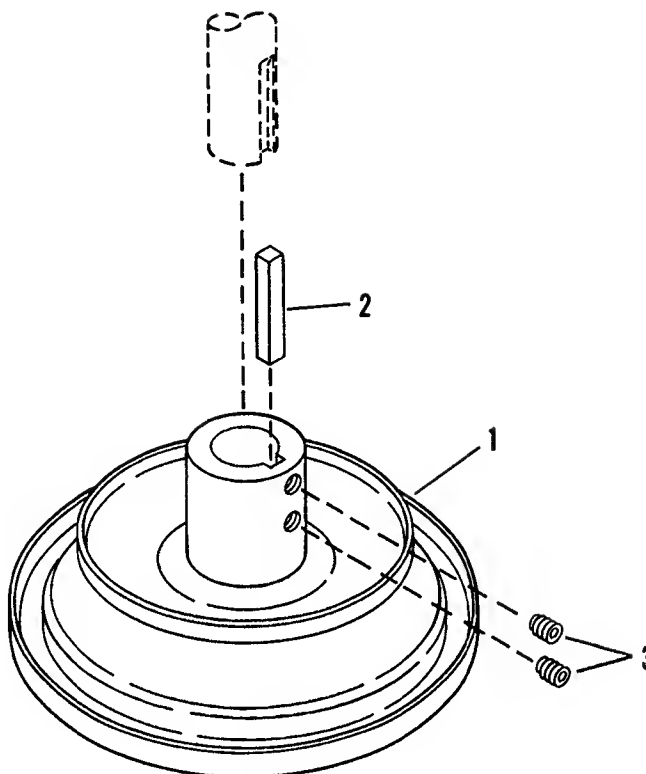


ITEM	PART NO.	DESCRIPTION
------	----------	-------------

1	5-1582	ASSEMBLY, Drive Disc, 5" O.D. for 25,26,&28" Models (Includes items 2,3)
-	5-1581	ASSEMBLY, Drive Disc, 4" O.D. for 30" Models (Includes items 2,3)
2	1-0210	KEY, 1/4x1/4x2"
3	9-0132	SET-SCREW, 3/8-16x3/8" (2)

EXHAUST - 6, 8 & 10 HP ENGINES

① KIT, Muffler

BRIGGS & STRATTON COMPONENTS

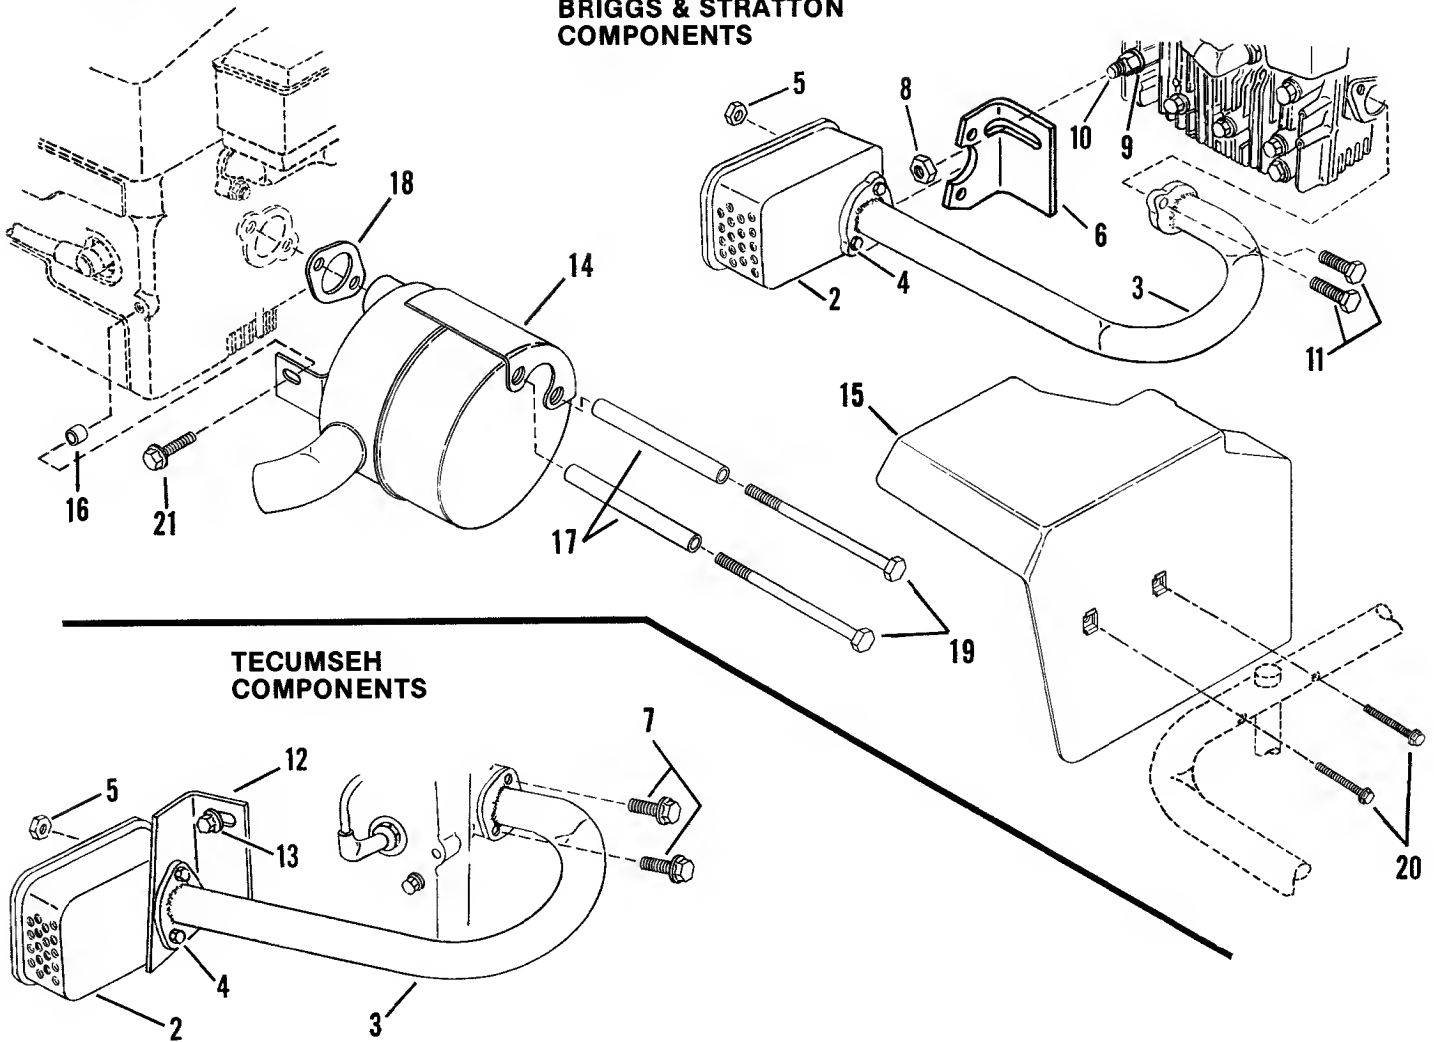


TECUMSEH COMPONENTS

ITEM PART NO. DESCRIPTION

1	6-0316	KIT, Muffler (Includes items 2 thru 13)
2	1-8198	MUFFLER
3	1-8197	TUBE, Exhaust
4	9-0553	CAPSCREW, 5/16Cx3", Hex Head (2)
5	9-0585	LOCKNUT, 5/16-18 Hex Flange (2)
6	3-2414	MOUNTING (For B&S Engine)
7	1-2438	SCREW, 5/16-18x3/4" Hex Flange (For Tec. Engine)
8	9-0196	NUT, 5/16-18 Hex (For B&S Engine)
9	1-2418	WASHER, Flat (For B&S Engine)
10	1-2419	STUD, Cylinder Head (For B&S Engine)
11	9-0072	CAPSCREW, 1/4-20x5/8" Hex Head (For B&S Engine) (2)
12	3-1958	CLIP, Mounting (For Tecumseh Engine)
13	9-0362	SCREW, 1/4Cx5/8" Self-Tapping (For Tec. Engine)
*14	1-6026	MUFFLER
*15	5-1647	ASSEMBLY, Heat Shield
*16	2-1866	SPACER
*17	1-5353	SPACER, Split (2)
*18	1-5352	GASKET, Exhaust
*19	9-0912	SCREW, 5/16-18x4-1/4" Hex Cap (2)
*20	9-0922	SCREW, #10-32x1-1/2" Hex Machine (2)
*21	9-0986	BOLT, 1/4-20x1" Hex Flange Lock

*(B&S 10 HP ENGINE ONLY)


ELECTRICAL SYSTEMS

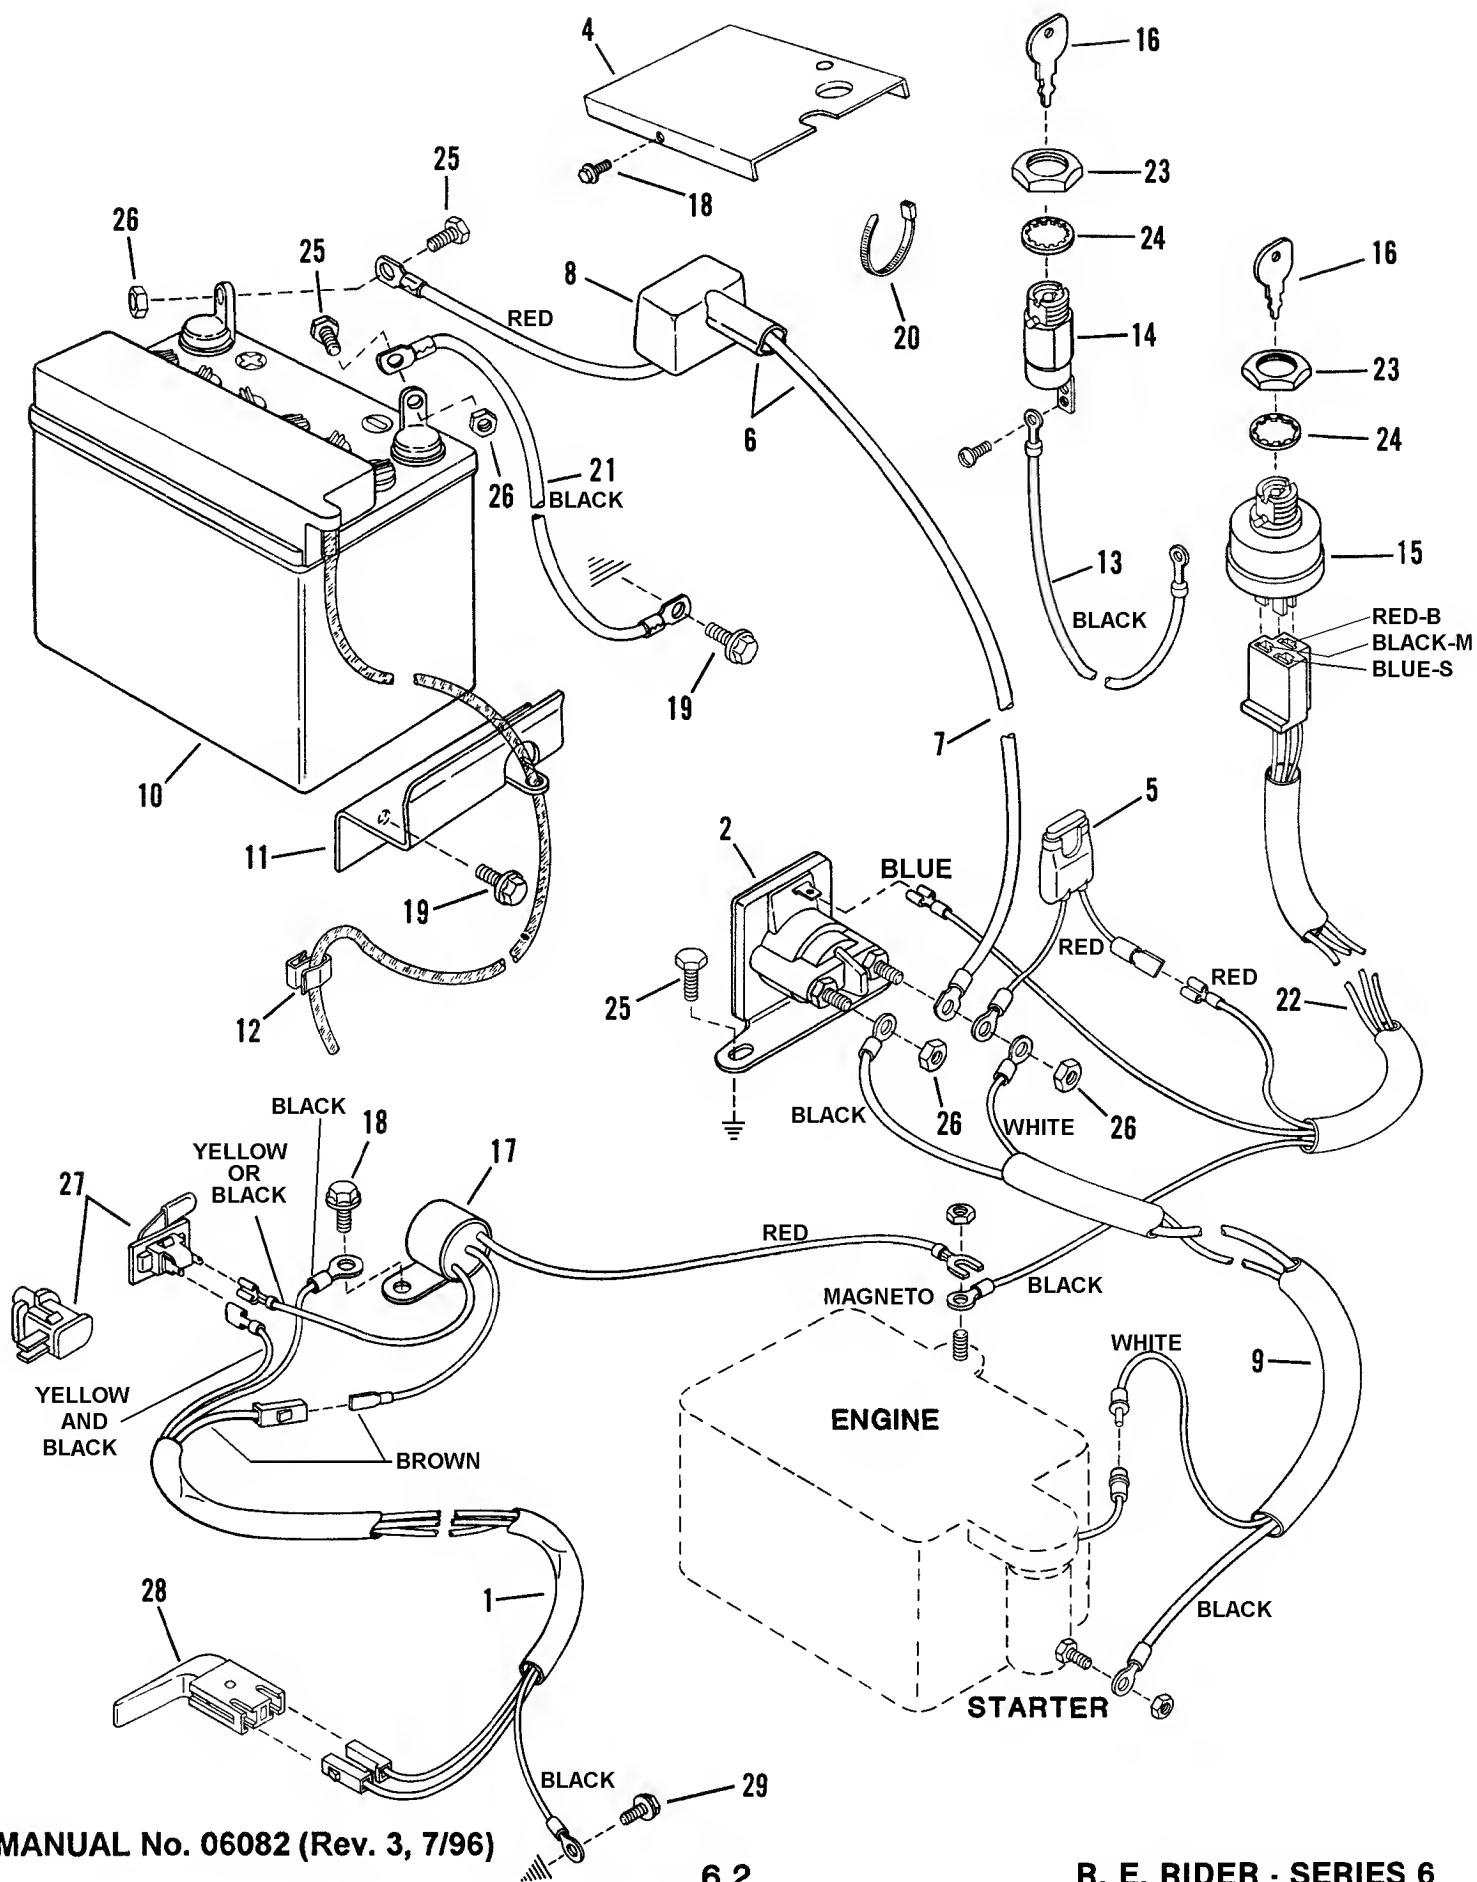

ELECTRICAL SYSTEMS


ITEM	PART NO.	DESCRIPTION
1	1-8873	HARNESS, Deck Interlock Wiring (87 & Earlier Models)
-	1-8912	HARNESS, Deck Interlock Wiring (88 & Later Models)
2	1-8817	SOLENOID
3	1-5431	HARNESS, Starter Wiring (Tec. Electric Start)(Not Shown)
4	3-8240	PANEL, Switch
5	1-5428	HOLDER, Fuse (Includes Fuse)
-	1-5468	FUSE (7.5 AMP)
6	5-1615	ASSEMBLY, Wire & Cover (Incl. items 7 & 8)
7	1-5432	CABLE, Positive (Red)
8	1-2444	COVER, Battery Cable
9	1-5430	HARNESS, Starter Wiring (B&S Electric Start)
10	6-0753	KIT, 12V Dry Charge Battery
11	3-7343	CLAMP, Battery Retaining
12	1-5063	CLIP, Battery Hose
13	1-2631	WIRE, Ground (B&S - Manual Start)
-	1-2643	WIRE, Ground (Tec. - Manual Start)
14	1-1853	SWITCH, Ignition (Used with Manual Start)
15	1-8816	SWITCH, Ignition (Used with Electric Start)
16	1-1138	KEY, Switch (2)
17	1-2632	INTERLOCK (B&S) (87 & Earlier Models)
-	1-5042	INTERLOCK (Tec.) (87 & Earlier Models)
-	1-5760	INTERLOCK (B&S)(88 & Later Models)
-	1-5759	INTERLOCK (Tec.)(88 & Later Models)
18	9-0539	SCREW, 1/4-20x1/2" Self-Tapping
19	9-0858	SCREW, 5/16-18x1/2" Self-Tapping
20	1-2080	CABLE-TIE (2)
21	1-1859	CABLE, Negative
22	1-8819	HARNESS, Wiring (B&S)
-	1-8820	HARNESS, Wiring (Tec.)
23	1-5438	NUT, 5/8-32 Hex
24	9-0880	WASHER, 5/8 Internal Tooth Lock
25	9-0072	SCREW, 1/4-20x5/8" Hex Head Cap (2)
26	9-0372	NUT, 1/4-20 Hex Lock (2)
27	5-0681	SWITCH, Shift Interlock (87 & Earlier Models)
-	1-5707	SWITCH, Shift Interlock (88 & Later Models)
28	1-8524	SWITCH, Deck Interlock
29	9-0307	SCREW, #10-24x1/2" H.W.H. Self-Tapping

FUEL TANK - OPERATORS SEAT

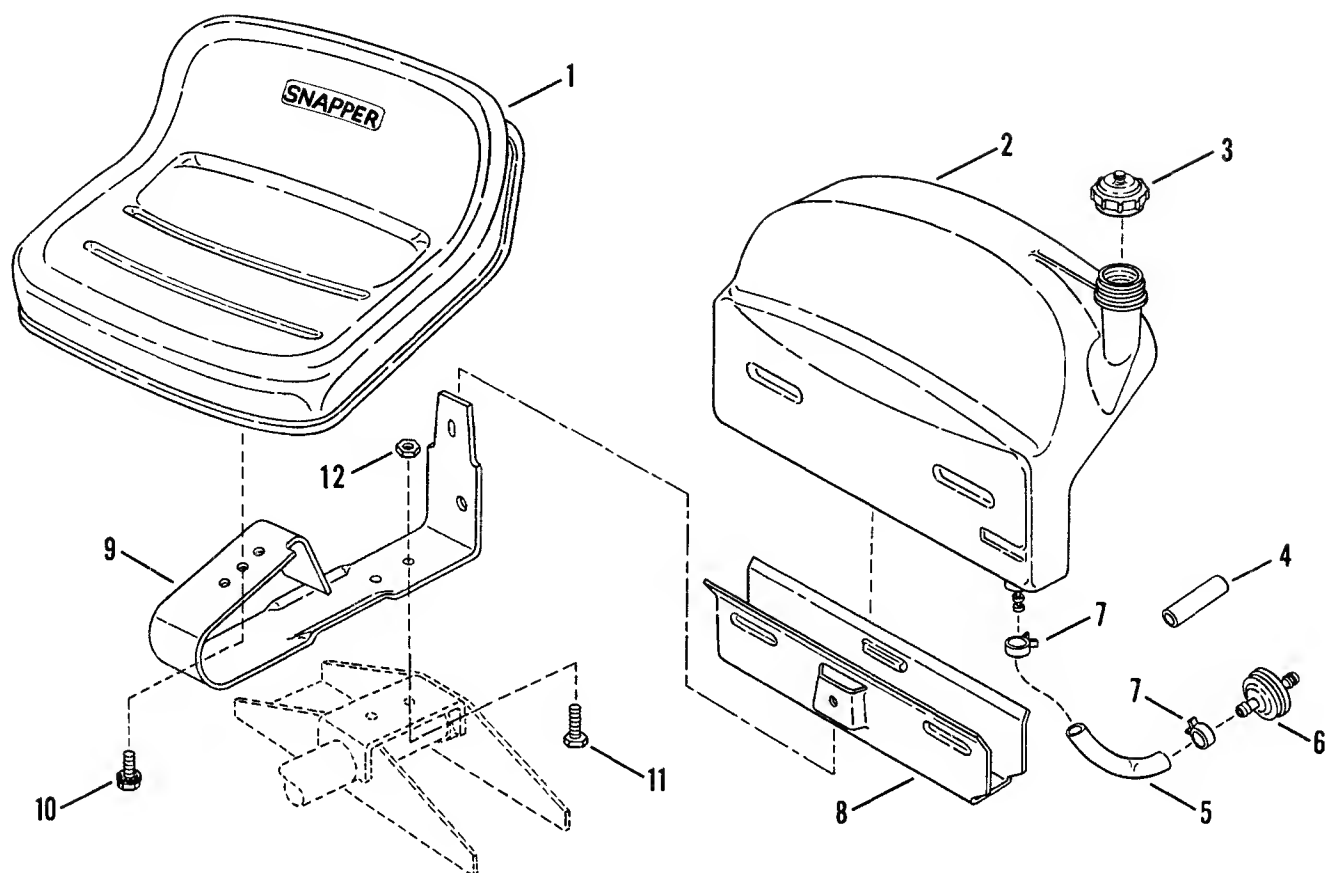


ITEM	PART NO.	DESCRIPTION
1	1-9519	SEAT, Operator
2	5-7243	ASSEMBLY, Fuel Tank (Includes item 3)
3	1-2515	CAP, Fuel Tank
4	3-2038	HOSE, Fuel, 3" (Tecumseh)
5	3-2015	HOSE, Fuel, 7" (Briggs & Stratton)
6	1-4359	FILTER, Fuel, In-Line
7	1-2222	CLAMP, Fuel Line
8	3-9607	BRACKET, Fuel Line
9	3-8333	SPRING, Operator's Seat
10	9-0680	BOLT, 1/2-13x3/4" Hex Flange Lock
11	9-0582	BOLT, 3/8-16x1 Flange Lock
12	9-0613	NUT, 3/8-16 Hex Lock

THROTTLE CONTROL

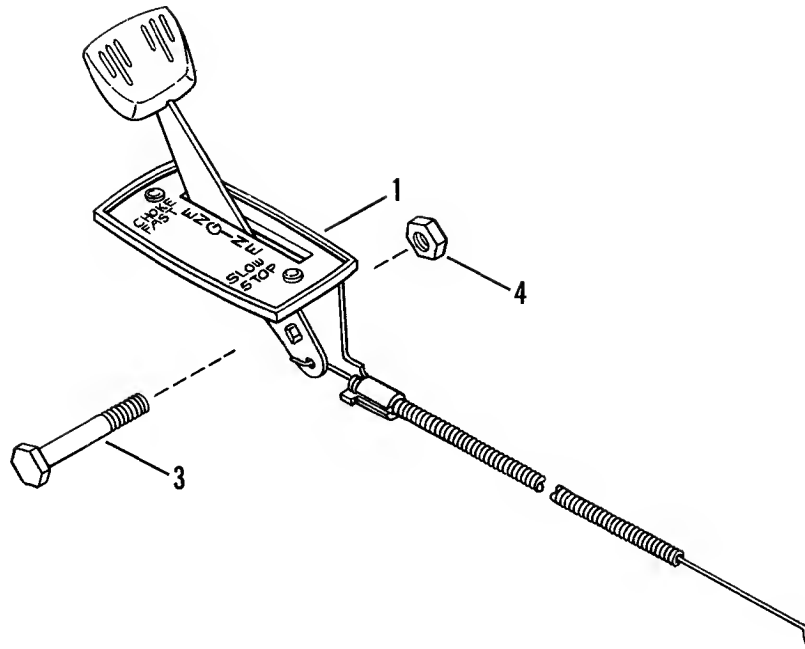


ITEM	PART NO.	DESCRIPTION
1	1-8889	CONTROL, Throttle (Briggs & Stratton) 11"
2	1-8237	CONTROL, Throttle (Tecumseh)(Not Shown) 15"
3	9-0528	SCREW, 1/4-28x1-1/2 Hex Head Cap (B&S)(Tec.)
4	9-0303	NUT, 1/4-28 Hex Lock

SPECIAL TOOLS

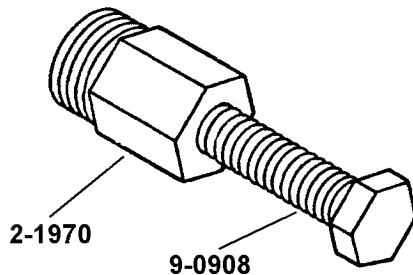





6-0747 DRIVE DISC PULLER

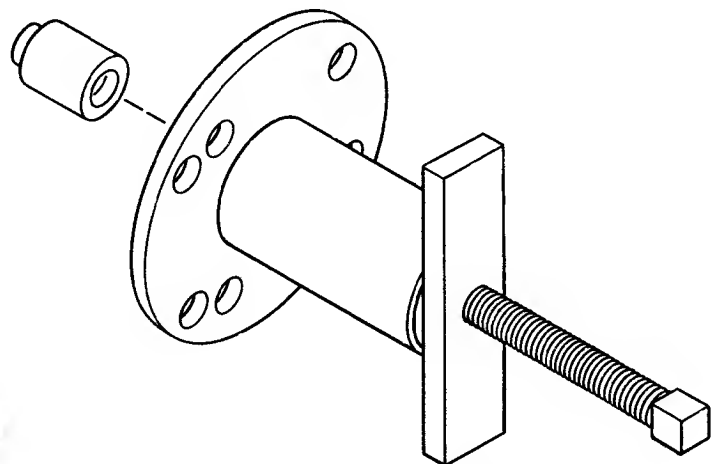

6-0327 WHEEL HUB PULLER

GRASS CATCHER ACCESSORY


① KIT, Grass Catcher
(Not Shown)

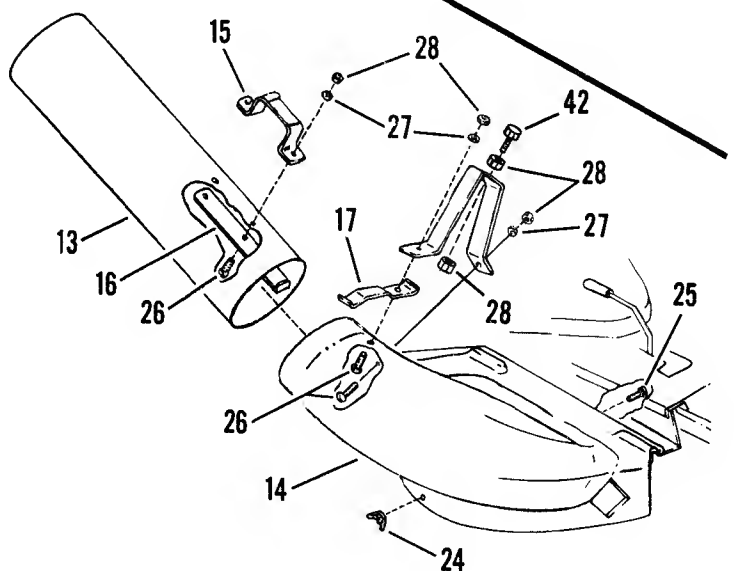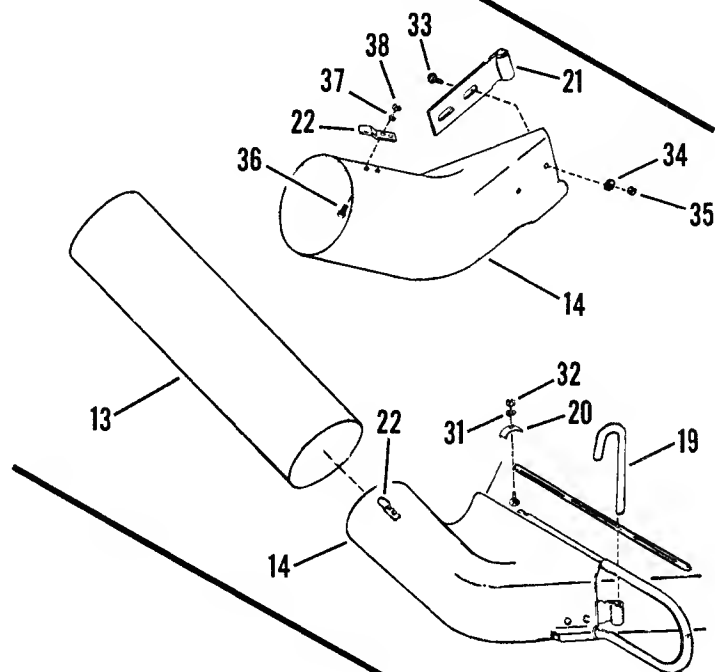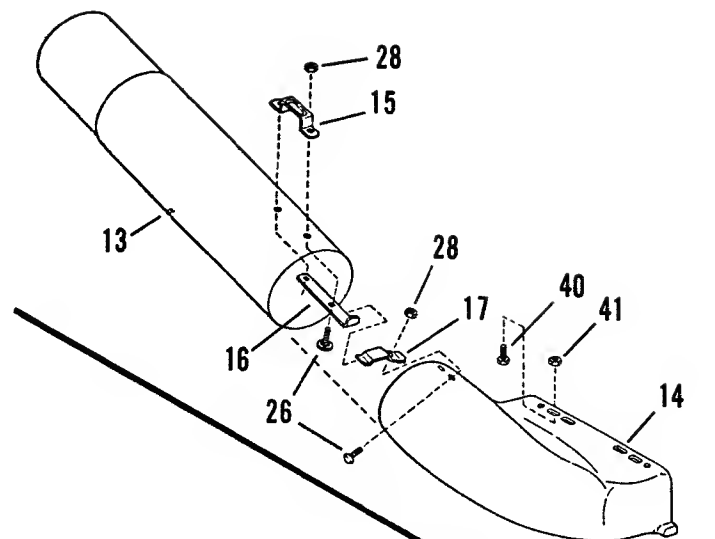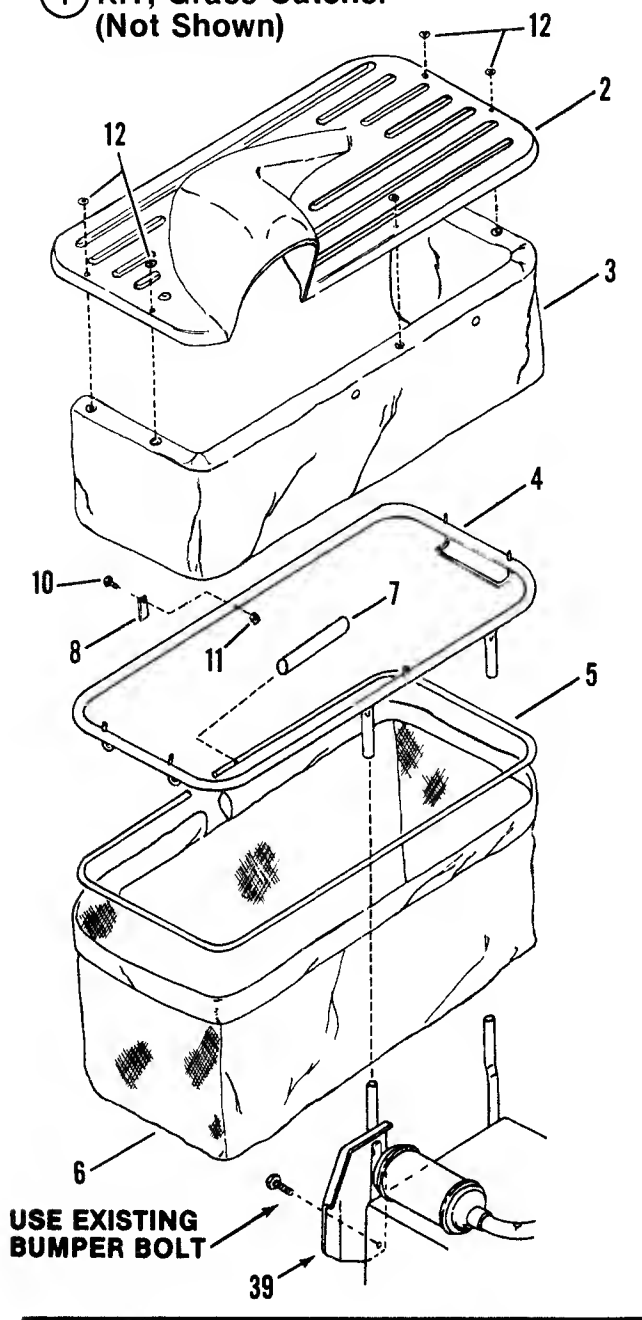

GRASS CATCHER ACCESSORY

ITEM	PART NO.	DESCRIPTION
1	6-0331	KIT, Grass Catcher - 25" Models
-	6-0789	KIT, Grass Catcher - 26 & 30" Models
-	6-0351	KIT, Grass Catcher - 28" Models
2	5-1303	TOP, Container - 25" (26 & 30" '87 & Earlier Models)(Incl. Decal #1-1910)
-	5-1304	TOP, Container - 28" (26 & 30" '88 & Later Models)(Includes Decal #1-1910)
3	1-8081	SKIRT, Dust (Included as part of item 6)
4	4-9557	FRAME, Structure
5	5-7248	ROD, Bag (Includes item 7)
6	1-8177	BAG, Grass (Includes Skirt, item 3)
7	1-2556	CONNECTOR, Bag Rod
8	3-1725	LATCH
9	9-0228	SCREW, 5/16-24x11/16" Oval Head Machine (6)
10	9-0532	CAPSCREW, #10-32x1 3/8" Hex Head
11	9-0376	NUT, #10-32 Hex Lock
12	1-1784	WASHER, Faceted
13	1-4750	TUBE, Grass 25" (26 & 30" '87 & Earlier Models) 31.5"x7.75"
-	1-4517	TUBE, Grass 28" (28 & 30" '88 & Later Models) 36"x8.25"
14	1-9809	ADAPTER, Deck - 25" Models
-	5-1390	ADAPTER, Deck - 26 & 30" ('87 & Earlier Models)
-	5-1663	ADAPTER, Deck - 26 & 30" ('88 & Later Models)
-	1-9912	ADAPTER, Deck - 28" Models
15	3-7745	HANDLE, Tube - 26,28 & 30" Models
16	3-1952	BASE, Handle - 26,28 & 30" Models
17	3-1951	LATCH, Tube - 26,28 & 30" Models
18	3-7725	BRACKET, Stand-Off - 28" Only
19	3-1715	PIN, Adapter Retention - 26 & 30" ('87 & Earlier Models)
20	3-1123	CLAMP, Adapter Retention - 26 & 30" ('87 & Earlier Models)
21	3-1714	BRACKET, Adjustment - 26 & 30" ('87 & Earlier Models)
22	3-1713	STOP, Tube 26 & 30" ('87 & Earlier Models)
23	3-1724	AIR-LIFT, Blade - 26 & 30"
-	3-7723	AIR-LIFT, Blade - 28"
24	9-0375	NUT, 5/16-18 Wing
25	9-0383	BOLT, 5/16-18x1" Carriage
-	9-0731	BOLT, 5/16-18x1/2" Short Neck Carriage (25" Models)
26	9-0074	BOLT, 1/4-20x3/4" Carriage
27	9-0053	WASHER, 1/4 Internal Tooth Lock
28	9-0063	NUT, 1/4-20 Hex
29	9-0545	SCREW, 5/16-24x1-1/2" Machine
30	9-0391	WASHER, 5/16 Internal Tooth Lock
31	9-0188	WASHER, 5/16 Flat
32	9-0223	NUT, 5/16-24 Hex
33	9-0005	BOLT, 1/4-20x1/2" Carriage
34	9-0055	WASHER, 1/4 Flat
35	9-0372	NUT, 1/4-20 Hex Lock
36	9-0024	SCREW, #10-32x1/2" Machine
37	9-0011	WASHER, #10 Internal Tooth Lock
38	9-0013	NUT, #10-32 Hex
39	3-6076	SHIELD, Muffler Heat
40	9-0541	SCREW, 1/4-28x3/4" Hex Cap (2)
41	9-0095	NUT, 1/4-28 Hex (2)
42	9-0548	SCREW, 1/4-20x1" Hex Cap
-	6-0735	KIT, Air Lift (26 & 30" Models)
-	6-0480	KIT, Air Lift (25 & 28" Models)


TWIN-BAG CATCHER ACCESSORY

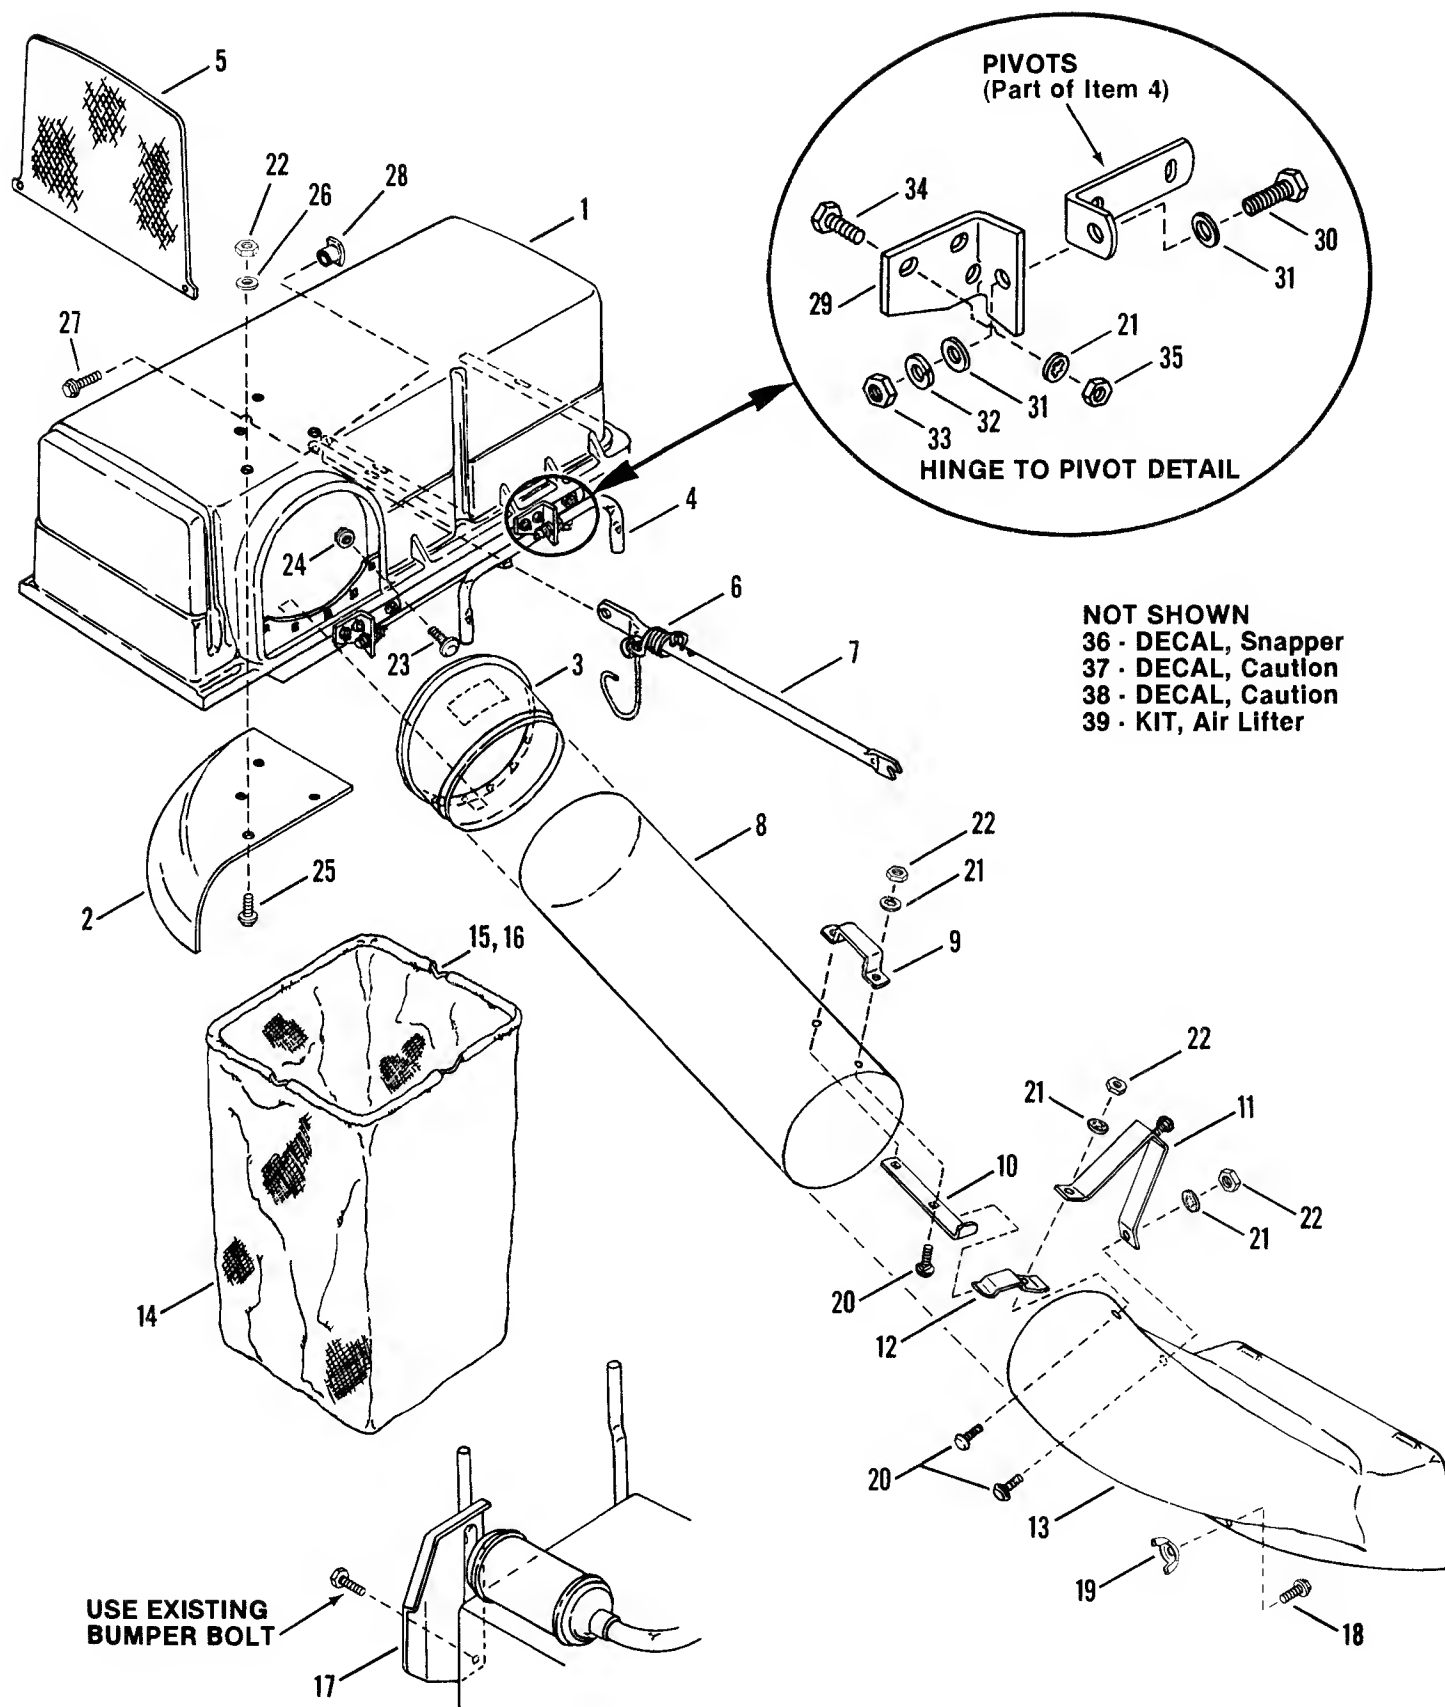

TWIN-BAG CATCHER ACCESSORY

ITEM	PART NO.	DESCRIPTION
-	6-0570	KIT, Twin Bag Catcher (Includes 1 thru 38)
1	5-9626	COVER ASSEMBLY (Includes 3-6075 Bar)
2	1-9725	SECTOR (Inside Top Baffle)
3	1-9966	INLET
4	5-9836	MOUNTING ASSY (Includes Following Indented Items)
-	3-5032	SUPPORTS, Bag (2)
-	3-5033	HOLDER, Bag Supports
-	3-6074	HOLDER, Inlet
-	3-2427	SPACER CLIP, Left Side Hinge Pivot
-	3-2311	PIVOT, Hinge
-	3-6071	CLOSURE, Right Side
-	3-6072	MOUNTING, Bagger Support Tube
5	5-7341	SCREEN ASSEMBLY (Includes 1-9731 Screen & 1-9732 Frame)
6	5-1407	SPRING & HOOK ASSEMBLY
7	3-6073	BRACE
8	1-4517	TUBE, Grass
9	3-7745	HANDLE, Tube
10	3-1952	BASE, Tube Handle
11	3-7725	BRACKET, Stand-Off
12	3-1951	LATCH, Tube
13	1-9912	ADAPTER, (Chute)
14	1-8613	BAG, Grass Catcher (2)
15	1-9965	ROD, Bag Support
16	1-4456	CONNECTOR, Rod
17	3-6076	SHIELD, Muffler Heat
18	9-0383	CARRIAGE BOLT, 5/16-18x1 Short Neck (1)
19	9-0375	WING-NUT, 5/16-18 (1)
20	9-0074	CARRIAGE BOLT, 1/4-20x3/4 Short Neck (4)
21	9-0053	LOCKWASHER, 1/4 Internal Tooth (8)
22	9-0063	NUT, 1/4-20 Hex (8)
23	9-0005	CARRIAGE BOLT, 1/4-20x1/2 Short Neck (5)
24	9-0477	LOCKNUT, 1/4-20 Flange (5)
25	9-0847	SCREW, 1/4-20x3/4 Round Hd Machine (4)
26	9-0055	WASHER, 1/4 SAE (Flat) (4)
27	9-0830	SCREW, 5/16Cx1-1/2 Flat Head (1)
28	3-1928	T-NUT, 5/16C (1)
29	3-8087	HINGE, Top (2)
30	9-0238	CAPSCREW, 5/16-24x1 Hex Head (2)
31	9-0188	WASHER, 5/16 SAE (Flat) (4)
32	9-0187	LOCKWASHER, 5/16 Split (2)
33	9-0222	LOCKNUT, 5/16-24 Hex (2)
34	9-0541	CAPSCREW, 1/4-28x3/4 Hex Head (4)
35	9-0095	NUT, 1/4-28 Hex (4)
36	1-8593	DECAL, Snapper (11-1/2" Long)
37	1-1910	DECAL, Caution (On Inlet-item 3)
38	1-1964	DECAL, Caution (Grass Bag)
-	6-0480	KIT, Air Lift (25" & 28" Models)
-	6-0735	KIT, Air Lift (26" & 30" Models)


LOAD CARRIER ACCESSORY

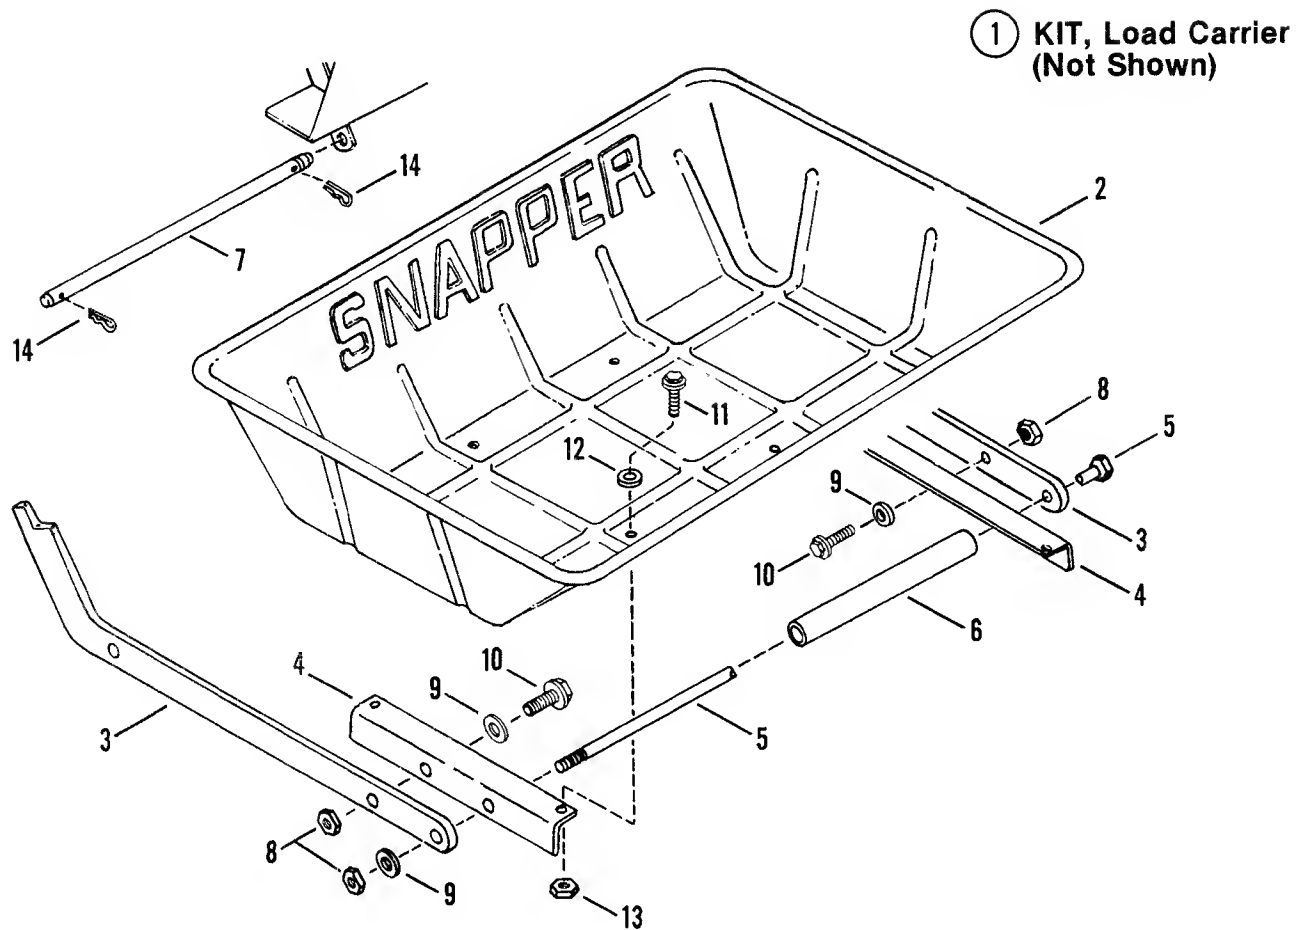

ITEM	PART NO.	DESCRIPTION
1	6-0197	KIT, Load Carrier (Includes items 2 thru 14)
2	1-1822	BOX, Tote
3	3-7342	RAIL, Side (2)
4	3-1737	BRACE (2)
5	1-1832	BOLT, 3/8-16x10", Tote Box
6	3-1738	SPACER, Box
7	2-1153	PIN (2)
8	9-0499	LOCKNUT, 3/8-16 Hex (3)
9	9-0122	WASHER, 3/8 SAE (3)
10	9-0138	CAPSCREW, 3/8-16x1", Hex Head (2)
11	9-0541	CAPSCREW, 1/4-28x3/4" Grade 5, Hex Head
12	9-0055	WASHER, 1/4 SAE (4)
13	9-0303	LOCKNUT, 1/4-28, Hex (4)
14	1-1714	PIN, Hair (2)


BAG-N-WAGON ACCESSORY

① KIT (Not Shown)

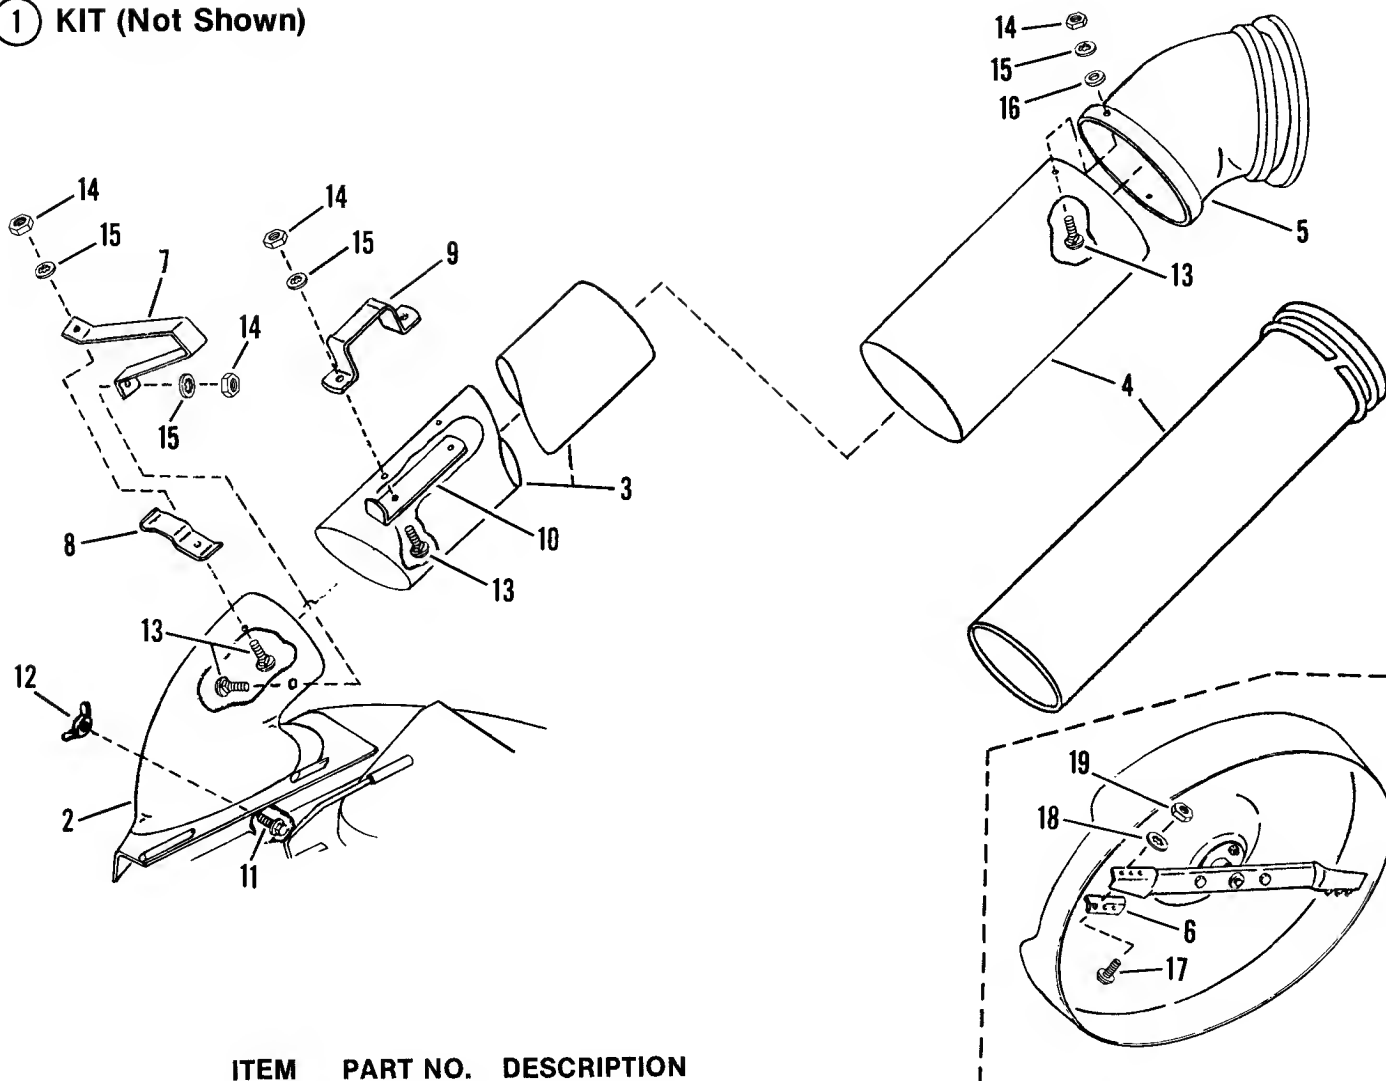

ITEM	PART NO.	DESCRIPTION
1	6-0300	KIT, Snapper Bag-N-Wagon (Complete)
-	6-0302	KIT, Wagon Cover (Part of Kit 6-0300 - (SEE PAGE 9.9)
2	1-9912	ADAPTER, Deck (FOR 28" & 33" ONLY)
3	1-4751	TUBE, Grass (8" Dia.)('87 & Earlier Models)
-	2-3115	TUBE, Grass (8" Dia.)('88 & Later Models)
4	1-4749	TUBE, Grass (10" Dia.)('87 & Earlier Models)
-	1-8985	TUBE, Grass ('88 & Later Models)
5	1-2408	ELBOW, Grass Tube ('87 & Earlier Models)
6	3-7723	AIR-LIFT, Blade (2)
7	3-7725	BRACKET, Stand-Off
8	3-1951	LATCH, Tube
9	3-7745	HANDLE, Tube
10	3-1952	BASE, Tube Handle
11	9-0383	BOLT, 5/16-18x1" Carriage
12	9-0375	NUT, 5/16-18 Wing
13	9-0074	BOLT, 1/4-20x3/4" Carriage (6)
14	9-0063	NUT, 1/4-20 Hex (6)
15	9-0053	WASHER, 1/4 Internal Tooth Lock (4)
16	9-0188	WASHER 5/16 Flat (4)
17	9-0228	SCREW, 5/16-24x21/32" Machine (6)
18	9-0391	WASHER, 5/16 Internal Tooth Lock (6)
19	9-0223	NUT, 5/16-24 Hex (6)

BAG-N-WAGON ACCESSORY

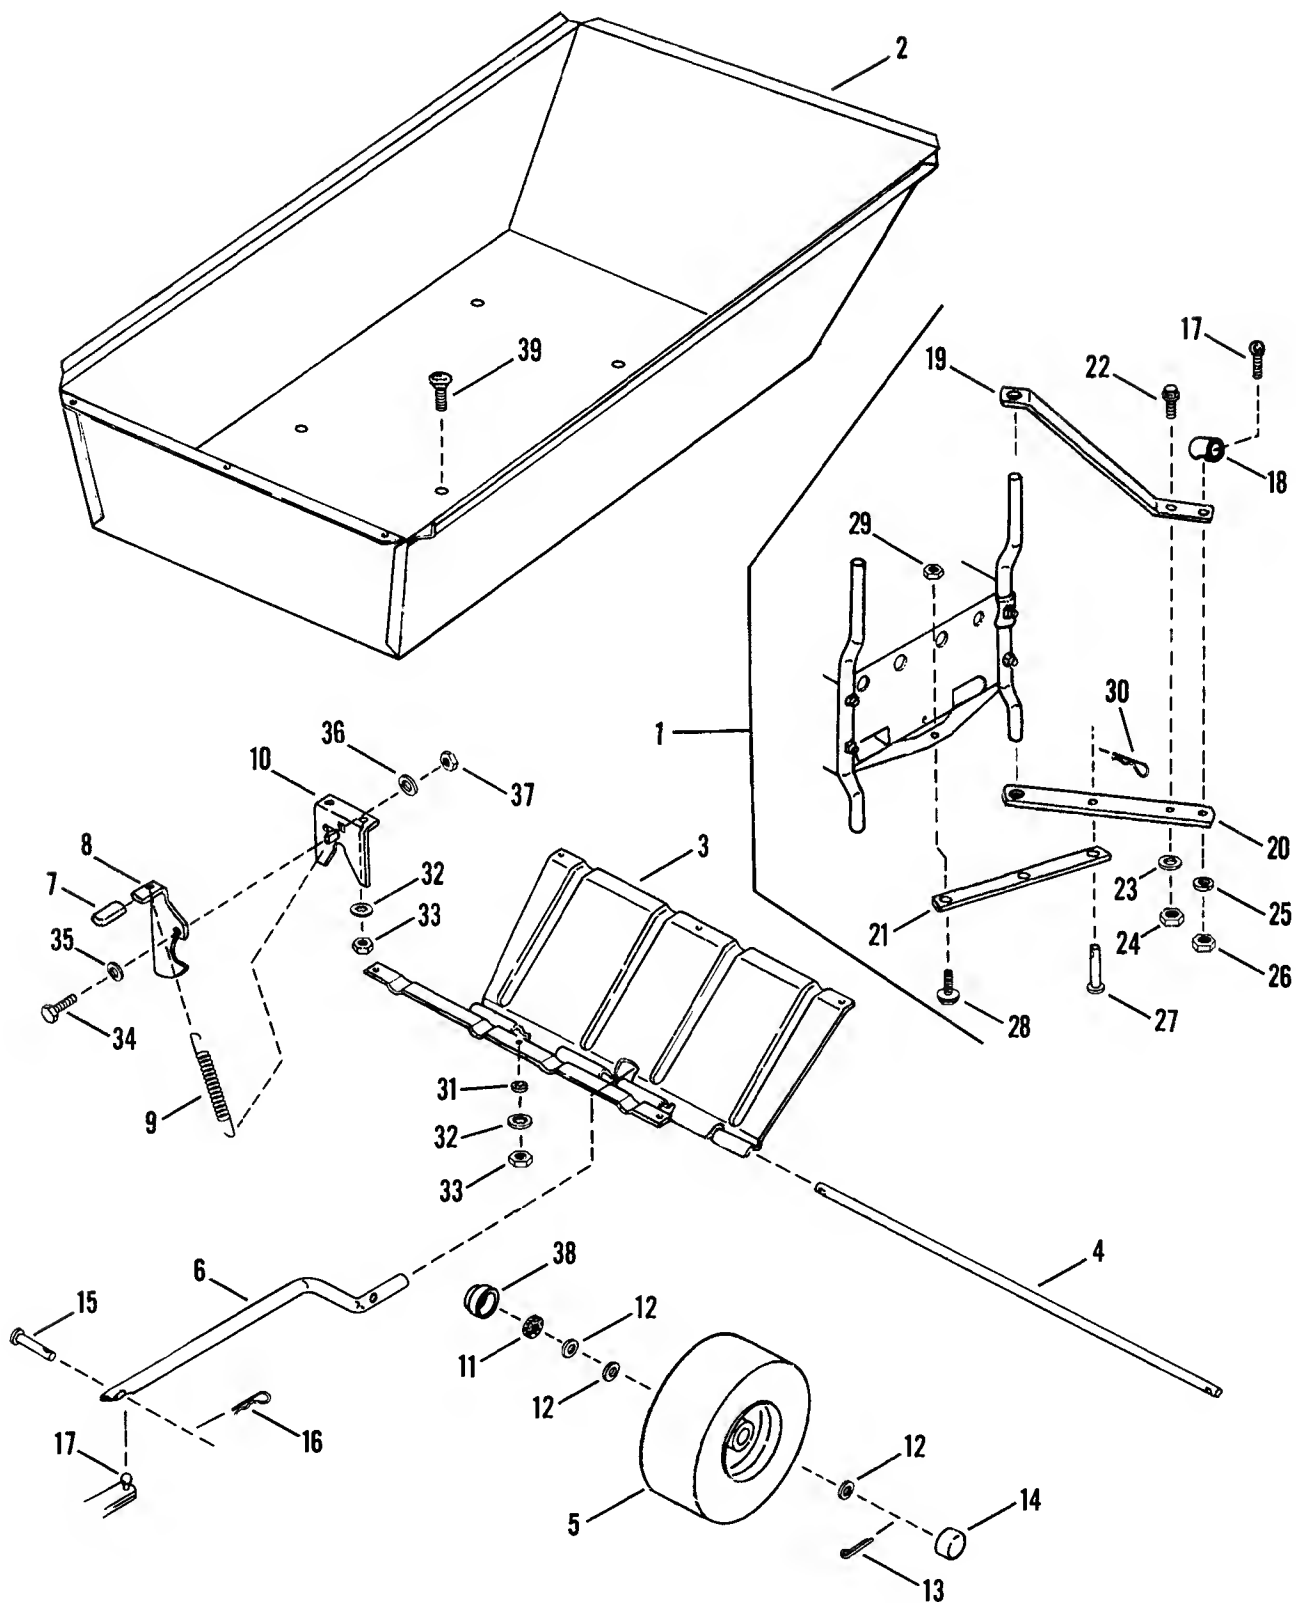

BAG-N-WAGON ACCESSORY


ITEM	PART NO.	DESCRIPTION
1	6-0734	ASSEMBLY, Hitch (includes item 17 thru 30)
2	4-0446	BODY, Wagon Cart
3	3-9604	SUPPORT, Axle
4	3-1949	AXLE
5	5-0618	WHEEL/TIRE ASSM'Y. (Semi-Pneumatic; Replace As Unit)(2)
6	3-1946	TONGUE
7	1-2391	GRIP, Latch
8	3-7736	LATCH
9	1-3694	SPRING, Latch
10	3-7737	YOKE
11	1-1032	WASHER, Felt (2)
12	1-0935	WASHER (6)
13	9-0364	COTTER-PIN, 5/32x1" (2)
14	1-1022	COVER, Dust (2)
15	1-1713	PIN, 3/8 Clevis
16	1-1714	PIN, Hair
17	1-2388	BALL, Hitch
18	2-1762	COLLAR, Hitch
19	3-7744	BAR, Upper Draw
20	3-7742	BRACE, Draw Bar
21	3-7743	BAR, Lower Draw
22	9-0160	SCREW, 3/8-24x1" Hex Head Cap
23	9-0118	WASHER, 3/8 Split Lock
24	9-0155	NUT, 3/8-24 Hex
25	9-0247	WASHER, 7/16 Split Lock
26	9-0460	NUT, 7/16-20 Hex
27	1-2389	PIN, Hitch Clevis
28	9-0268	SCREW, 1/2-20x1" Hex Head Cap
29	9-0393	NUT, 1/2-20 Hex Lock
30	1-5067	PIN, Hair
31	1-2485	RETAINER, 1/4 Bolt (6)
32	9-0053	WASHER, 1/4 Internal Tooth Lock (8)
33	9-0063	NUT, 1/4-20 Hex (8)
34	1-1078	BOLT, 5/16-18 Shoulder
35	1-1079	WASHER, Spring
36	9-0187	WASHER, 5/16 Split Lock
37	9-0196	NUT, 5/16-18 Hex
38	3-1038	DUST-CAP (2)
39	9-0074	BOLT, 1/4-20x3/4" Carriage (6)
-	1-8593	DECAL, SNAPPER (2)
-	1-2464	DECAL, Max Load Warning

USE HITCH ASSEMBLY NUMBER for BAG-N-WAGON

SEE PAGE 11 for DUMP CART KIT

BAG-N-WAGON, FRAME & CANOPY

① KIT, Wagon Cover

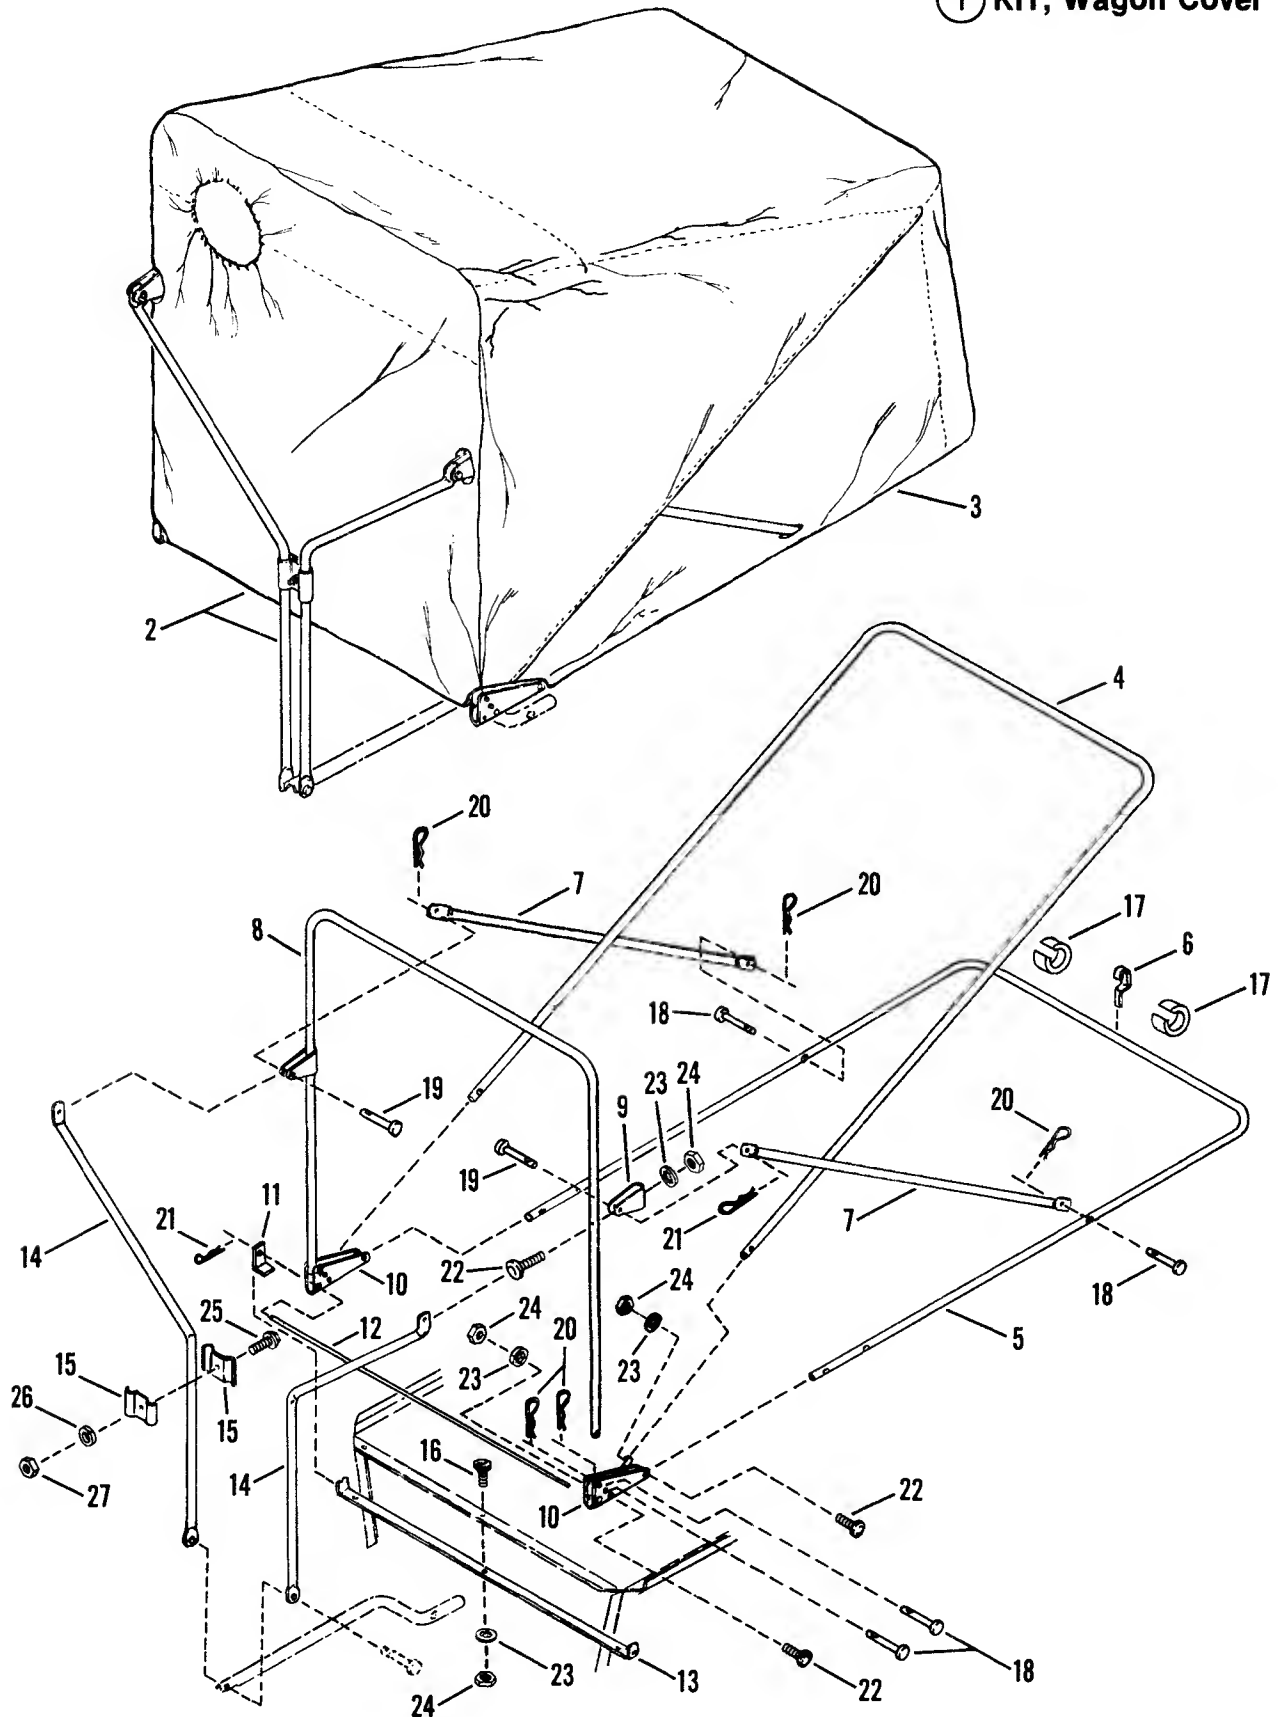

BAG-N-WAGON, FRAME & CANOPY


ITEM	PART NO.	DESCRIPTION
1	6-0302	KIT, Wagon Cover (Also Part of 6-0300, P. 9.6) (Includes items 2 thru 27)
2	5-0806	FRAME/CANOPY ASSEMBLY (Includes items 3 thru 27)
3	1-2396	CANOPY, Cloth Only
4	3-1943	FRAME, Center
5	3-1945	FRAME, Base
6	3-1950	LOCK, Canopy
7	3-1941	BRACE, Frame (2)
8	3-1944	FRAME, Front
9	3-1939	CLAMP, Rod (2)
10	3-1938	BRACKET, Corner (2)
11	3-1948	CLIP, Hinge
12	2-1761	PIN, hinge
13	3-1940	Mount, Hinge
14	3-1942	STRUT, Frame (2)
15	3-1956	CLAMP, Strut (2)
16	9-0074	BOLT, 1/4-20x3/4" Carriage (3)
17	1-0996	BUSHING, Plastic Wear Pads (2)
18	1-2393	PIN, 1/4x1 1/8" Clevis (6)
19	1-2407	PIN, 5/16 Clevis (2)
20	1-2431	PIN, 1/4 Hair (6)
21	1-5067	PIN, Hair
22	9-0496	BOLT, 1/4-20x1" Carriage (6)
23	9-0053	WASHER, 1/4 Internal Tooth Lock (9)
24	9-0063	NUT, 1/4-20 Hex (9)
25	9-0160	SCREW, 3/8-24x1" Hex Head Cap
26	9-0118	WASHER, 3/8 Split Lock
27	9-0155	NUT, 3/8-24 Hex

NOT SHOWN

ADAPTER, Air Lift, Grass Tube (See Page 9.6)

DUMP CART ACCESSORY


KIT 6-0697 PARTS LIST

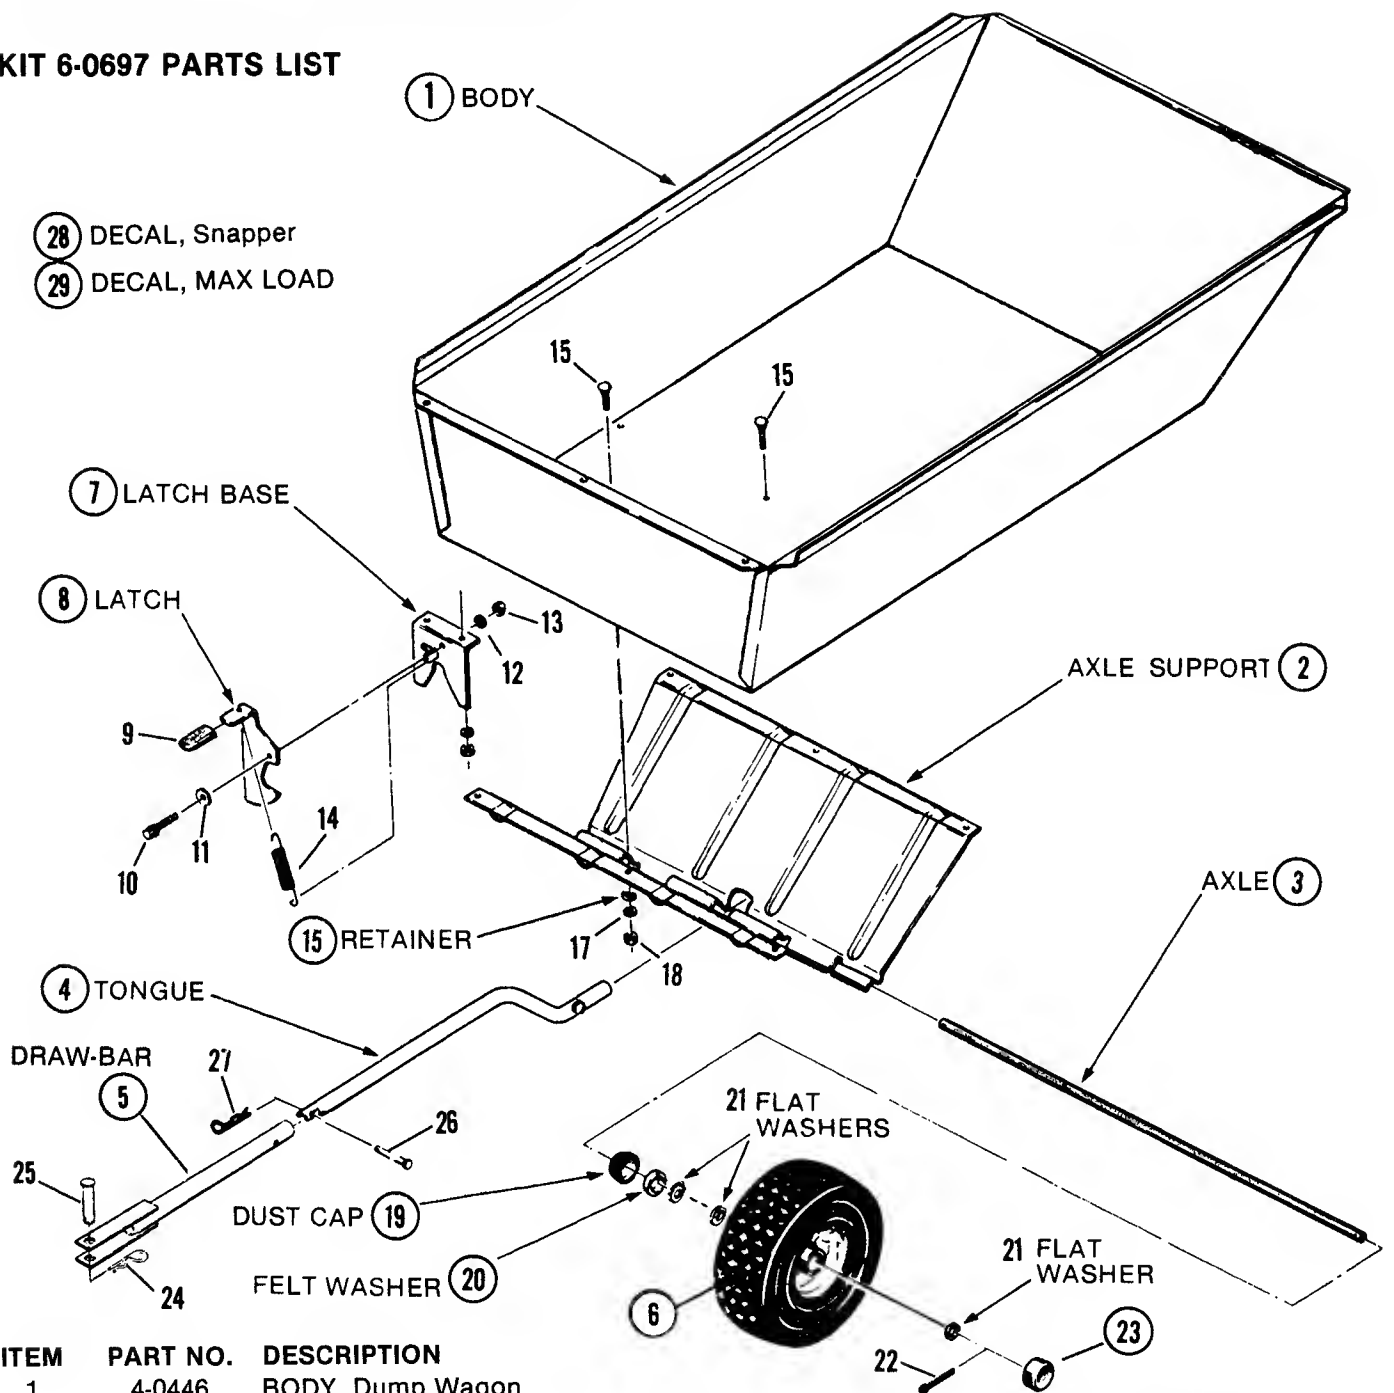

ITEM	PART NO.	DESCRIPTION		
1	4-0446	BODY, Dump Wagon		
2	3-9604	SUPPORT, Axle		
3	3-1949	AXLE		
4	3-1946	TONGUE		
5	4-7869	DRAW-BAR		
6	5-0618	TIRE, Semi-Pneumatic (2)		
7	3-7737	BASE, Latch (Yoke)		
8	3-7736	LATCH		
9	1-2391	GRIP, Latch		
10	1-1078	BOLT, 5/16-18 Shoulder		
11	1-1079	WASHER, Spring		
12	9-0187	WASHER, 5/16 Split Lock		
13	9-0196	NUT, 5/16-18 Hex		
14	1-3694	SPRING, Latch		
15	9-0074	BOLT, 1/4-20x3/4 Carriage (8)		
			16	1-2485 RETAINER, 1/4" Bolt (6)
			17	9-0053 WASHER, 1/4 Internal Lock (8)
			18	9-0063 NUT, 1/4-20 Hex (8)
			19	3-1038 DUST CAP (2)
			20	1-1032 WASHER, Felt (2)
			21	1-0935 WASHER, Flat (6)
			22	9-0364 COTTER-PIN, 5/32x1" (2)
			23	1-1022 HUB-CAP (2)
			24	1-1768 CLEVIS-PIN, 1/2-2
			25	1-5067 HAIR-PIN, 1-7/16
			26	1-1713 CLEVIS-PIN, 3/8x2-1/4
			27	1-1714 HAIR-PIN, 3/32x1-7/8
			28	1-8593 DECAL, Snapper (2)
			29	1-2464 DECAL, MAX LOAD Warn

THATCHERIZER ACCESSORY


① KIT, Thatcherizer

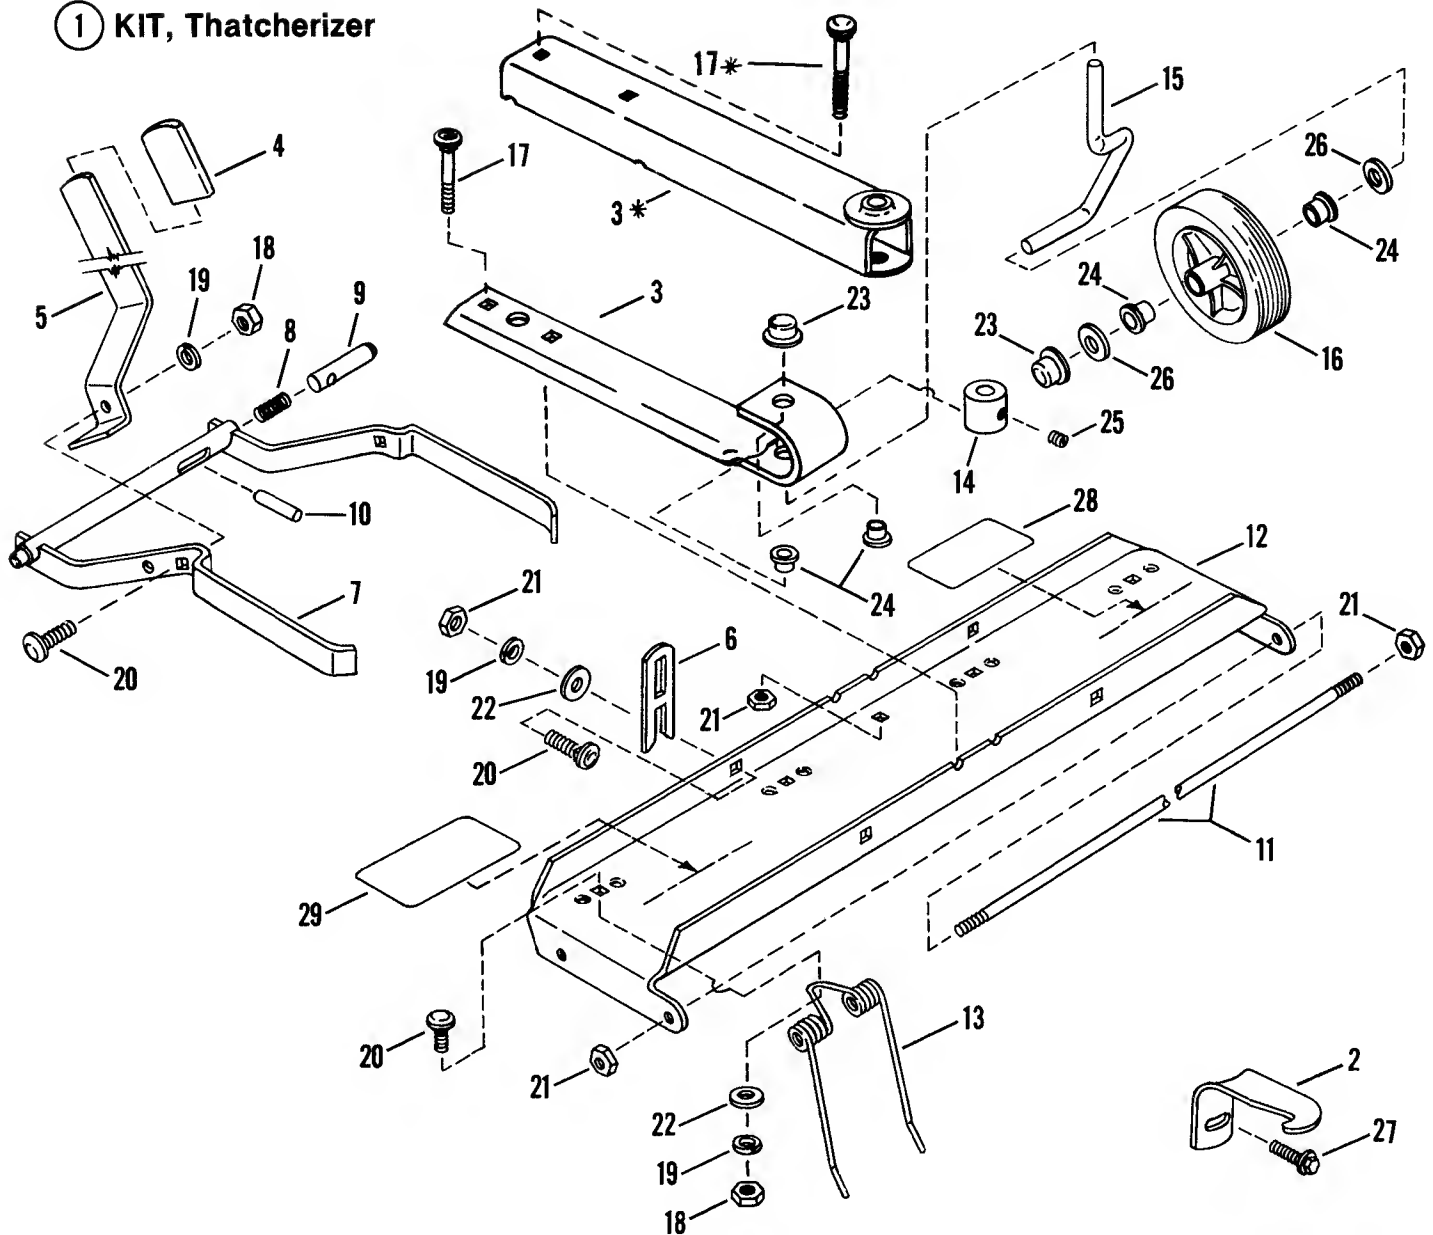

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	6-0479	KIT, Thatcherizer (Includes items 2 thru 29)	15	1-8493	AXLE, Wheel
2	1-8495	BRACKET, Transport Lock	16	1-8189	WHEEL, 7"
3	1-8700	SUPPORT, Wheel Assembly	17	9-0015	CARRIAGE BOLT, 1/4-20x1 3/4" (2)
*	1-8492	SUPPORT, Wheel Assembly	*	9-0798	CARRIAGE BOLT, 1/4-20x2 1/2" (2)
4	1-4109	GRIP, Handle	18	9-0196	NUT, 5/16-18 Hex (9)
5	1-8494	HANDLE, Lift	19	9-0187	LOCKWASHER, 5/16 Split (13)
6	1-4108	STRAP, Frame Mount (4)	20	9-0383	CARRIAGE BOLT, 5/16-18x1" (13)
7	1-4104	FRAME, Thatcherizer	21	9-0761	LOCKNUT, 1/4-20 Hex (10)
8	1-4107	SPRING, Compression	22	1-4098	WASHER, Reinforcing (12)
9	1-4105	PIN, Locking	23	1-4101	PUSH-NUT, 1/2" (2)
10	1-4106	ROLL-PIN	24	1-4342	BEARING, Nylon, Snap-In (4)
11	1-4110	ROD, Tine Retainer	25	1-4103	SET-SCREW, 5/16-18x1/4" Slotted
12	1-9947	TRAY, Tine (28")	26	9-0250	WASHER, 1/2" SAE (2)
13	1-8491	SPRING, Tine Thatching (8)	27	9-0765	SCREW, 5/16-18x3/4" HHS-Tapping
14	1-4100	BUSHING	28	1-4119	DECAL, Instruction
			29	1-4062	DECAL, Thatcherizer

*Optional may be used instead of items 3&17)

SNOW/DOZER PLOW ACCESSORY

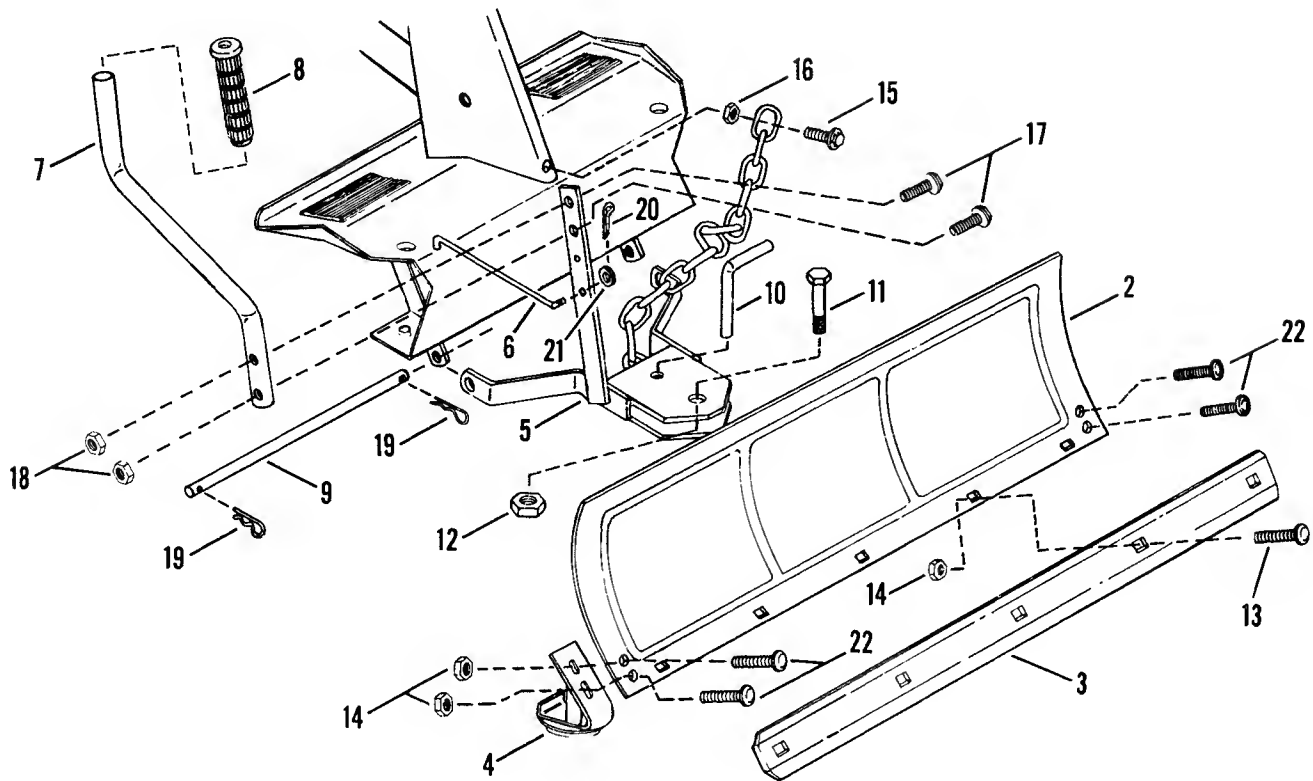

ITEM	PART NO.	DESCRIPTION
1	6-0294	KIT, Rider Snow Plow (Includes items 2 thru 22)
2	4-7727	BLADE, Snow
3	3-7733	SCRAPPER
4	4-0445	SLIDE, Blade (2)
5	4-7351	BRACKET, Blade Lift
6	4-0466	LATCH (Replaces 1-1995)
7	5-7084	HANDLE
8	1-1870	GRIP, Handle
9	2-1153	PIN, Holding
10	3-1002	PIN, "L"
11	9-0017	SCREW, 1/2-20x2 3/4" Hex Head Cap
12	9-0266	NUT, 1/2-20 Hex Lock
13	9-0850	BOLT, 3/8-16x3/4" Carriage (5)
14	9-0546	NUT, 3/8-16 Hex Lock (9)
15	9-0369	SCREW, 5/16-18x1", Self-Tapping
16	9-0196	NUT, 5/16-18 Hex
17	9-0161	SCREW, 3/8-24x1 3/4" Hex Cap (2)
18	9-0289	NUT, 3/8-24 Hex Lock (2)
19	1-1714	PIN, Hair (2)
20	9-0365	COTER-PIN, 1/8x3/4"
21	9-0747	BOLT, 3/8-16x1" Carriage (4)

SNAPPER®

⚠ CAUTION ⚠
DEFLECTOR MUST BE
FASTENED DOWN OR
GRASS CATCHER INSTALLED
BEFORE OPERATING MOWER.

REMOVE BATTERY BEFORE
STANDING MOWER ON END
FOR MORE THAN 2 HOURS

⚠ CAUTION.

- ROTATING BLADES
- KEEP HANDS AND FEET FROM UNDER MOWER
- KEEP DEFLECTOR IN PLACE WHEN MOWER IS OPERATING

DANGER
KEEP HANDS and FEET AWAY



HI-VAC

BRAKE OPERATION

TO STOP: DEPRESS CLUTCH/BRAKE PEDAL.

TO SET PARKING BRAKE: DEPRESS CLUTCH/BRAKE PEDAL, SLIDE PARK LATCH TO LEFT, AND RELEASE CLUTCH/BRAKE PEDAL.

TO RELEASE PARKING BRAKE:
 DEPRESS CLUTCH/BRAKE PEDAL.

BLADE OPERATION

TO START BLADE: SHIFT BLADE LEVER ON AND HOLD. PUSH BLADE PEDAL WITH HEEL. KEEP EITHER HEEL ON PEDAL TO MOW.

TO STOP BLADE: REMOVE HEEL FROM BLADE PEDALS OR SHIFT BLADE LEVER OFF.


ENGINE

OFF ON

ITEM	PART NO.	DESCRIPTION
1	1-8586	DECAL, Snapper
2	1-4416	DECAL, Caution - Deflector
3	1-9582	DECAL, Caution - Rotating Blades
4	1-2358	DECAL, Battery
5	1-3871	DECAL, Danger
6	1-5032	DECAL, Hi-Vac
7	1-5475	DECAL, Blade Brake Operation
8	1-5427	DECAL, Column Cap
9	1-1964	DECAL, Caution - Grass Bag (Not Shown)
10	1-1910	DECAL, Caution - Carrier (Not Shown)
11	1-2464	DECAL, Maximum Capacity (Not Shown)
12	1-4119	DECAL, Thatcherizer (Not Shown)

SNAPPER®

Parts Manual for

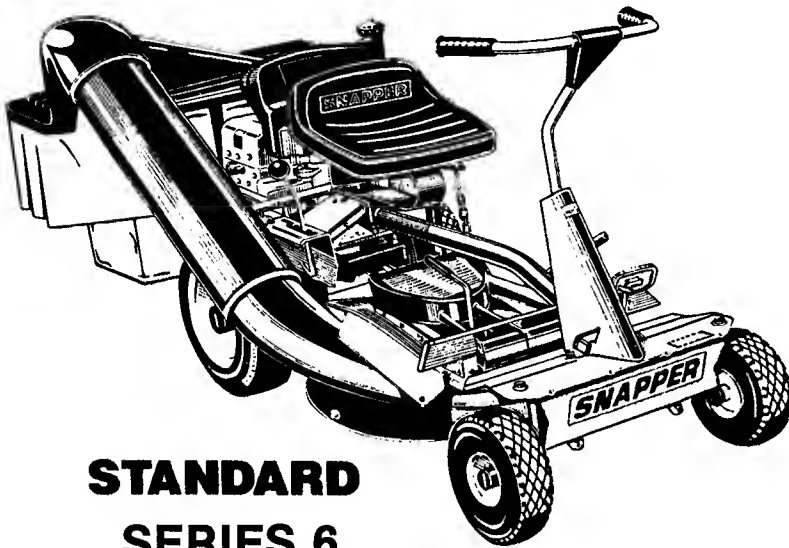

STANDARD SERIES 6 REAR-ENGINE RIDING MOWERS

IT IS THE POLICY OF SNAPPER POWER EQUIPMENT TO IMPROVE ITS PRODUCTS WHENEVER IT IS POSSIBLE AND PRACTICAL TO DO SO. WE RESERVE THE RIGHT TO MAKE CHANGES OR ADD IMPROVEMENTS AT ANY TIME WITHOUT INCURRING ANY OBLIGATION TO MAKE SUCH CHANGES ON PRODUCTS MANUFACTURED PREVIOUSLY.

SNAPPER® McDonough, GA., 30253 U.S.A.